

Software User Manual

www.beward.eu

BEWARD IPS

- User friendly interface
- Quick search and setting of N series IP cameras



Table of contents

CHAPTER 1. BEWARD IPS S/W INSTALLATION.....	3
1.1. SYSTEM REQUIREMENTS	3
1.2. INSTALLATION	3
1.3. QUICK START	6
1.3.1. Install IP camera(s).....	6
1.3.2. Add IP camera(s)	6
1.3.3. Set schedule.....	8
1.3.4. Set smart guard.....	9
1.3.5. Start recording & smart guard	10
1.3.6. Playback	10
CHAPTER 2. MAIN CONSOLE	12
2.1. START	13
2.2. INFORMATION WINDOW	14
2.3. PTZ CAMERA CONTROL	14
2.4. ON SCREEN MENU.....	16
CHAPTER 3. PLAYBACK.....	18
3.1. INFORMATION WINDOW	19
3.2. AUDIO VOLUME CONTROL	19
3.3. SCREEN DIVISION.....	19
3.4. BROWSE MODE	19
3.5. DATE TIME	19
3.6. ENHANCEMENT	21
3.7. SAVE VIDEO	21
3.8. SAVE IMAGE.....	21
3.9. PRINT	22
3.10. BACKUP	22
3.11. LOG VIEWER	23
CHAPTER 4. SCHEDULE.....	26
4.1. DAY MODE	26
4.2. LOAD PRESET MODES.....	26
4.3. INSERT A NEW SCHEDULE MANUALLY	27
4.4. COPY SCHEDULE.....	28
4.5. WEEK MODE	28
4.6. ADJUST THE SCHEDULED SETTING.....	29
4.7. ENCODING OPTION PANEL.....	30
CHAPTER 5. GUARD	32
5.1. EVENT.....	32
5.1.1. Event - general motion	33
5.2. ACTION.....	35
CHAPTER 6. CONFIGURATION	37
6.1. SETTING - GENERAL	37
6.2. SETTING - CAMERA.....	40
6.3. SETTING - I/O DEVICE.....	43
6.4. SETTING - PTZ CONFIG	44
6.5. SETTING - USER ACCOUNT	45
6.6. SETTING - MONITOR DISPLAY.....	46
6.7. SAVE/ LOAD CONFIGURATION	46
6.8. LOG VIEWER	47
6.8.1. Log viewer - unusual event.....	47
6.8.2. Log viewer - system log	48
6.9. BACKUP	49
6.9.1 Backup.....	49
6.9.2. Delete recorded information from the system	52
6.10. NETWORK SERVICE	54
6.10.1. Live Streaming Server.....	54
6.10.2. Remote playback server	57
6.11. ABOUT MAIN CONSOLE	60

CHAPTER 7. REMOTE LIVE VIEWER.....	61
7.1. SETUP PANEL.....	61
7.1.1. Server	61
7.1.2. Group.....	62
7.1.3. Setup cameras OSD	63
7.1.4. Setup remote joystick control	64
7.2. SHOW CAMERA(S) ON THE DISPLAY SCREEN	64
CHAPTER 8. WEB VIEW.....	66
8.1. SERVER IP	66
8.2. REMOTE LIVE VIEWER.....	66
8.3. REMOTE PLAYBACK	66
APPENDIX	67
A. SYSTEM LOADING	67
B. STORAGE REQUIREMENTS TABLE (VGA)	68
C. STORAGE REQUIREMENT TABLE (MEGA)	74

Chapter 1. BEWARD IPS S/W installation

1.1. System requirements

Table №1

Total FPS at CIF	480~640	360~480	240~360	120~240	0~120
CPU	Intel Core 2 Duo	Intel Pentium D 930	Intel Pentium D 930	Intel P4 2.8 GHz	Intel P4 2.4 GHz
RAM	1 GB	1 GB	1 GB	512 MB	512 MB
Motherboard	Intel 945 or 965 chip, Intel Chipset recommended				
Display	ATI Radeon 9200, nVIDIA GeForce FX-5200, Intel 945 / 965, or above (ATI recommended)				
Ethernet	100 BaseT or Above, Gigabit LAN Recommended				
Hard Disk	80 GB or more				
OS	MS Windows 2000 / XP Pro SP2 / 2003 / Vista / Win 7				

1.2. Installation

Step 1: insert the Installation CD.


Step 2: run Setup.exe from the CD-CD-ROM driver/ directory to install. *Picture 1.1.*




Pic. 1.1

Step 3: check the option “I accept the terms of the license agreement” (*Pic. 1.2*).

 Step 4: enter your name and the company name where you work (*Pic. 1.3*).

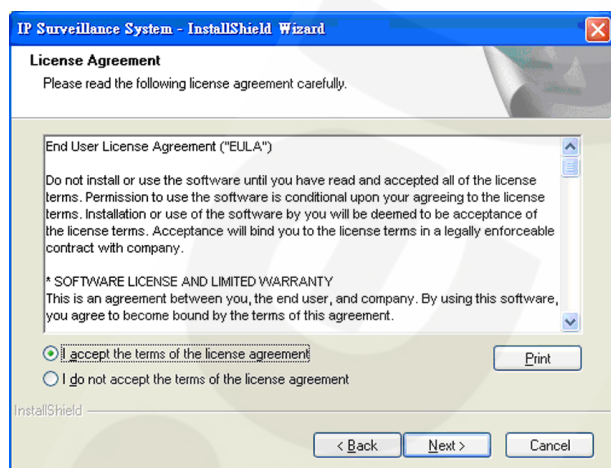

Pic. 1.2

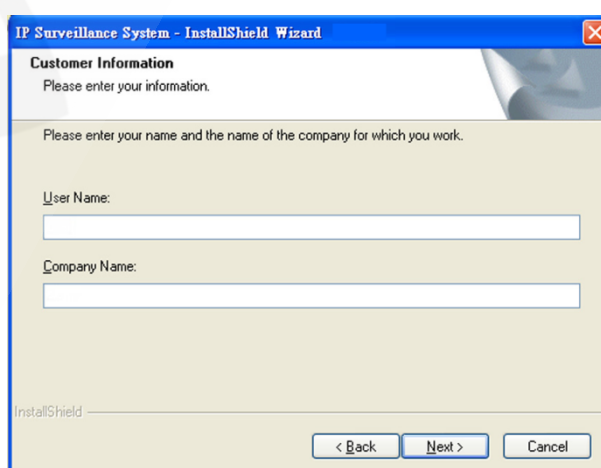 

Pic. 1.3

 
Complete setup type (*Pic. 1.4*):

Install all program features into the default directory.


Step 5: check the option “Complete”.

All program features will be installed (requires the most disk space).

Step 6: press the **[Install]** to start the installation (*Pic. 1.5*).

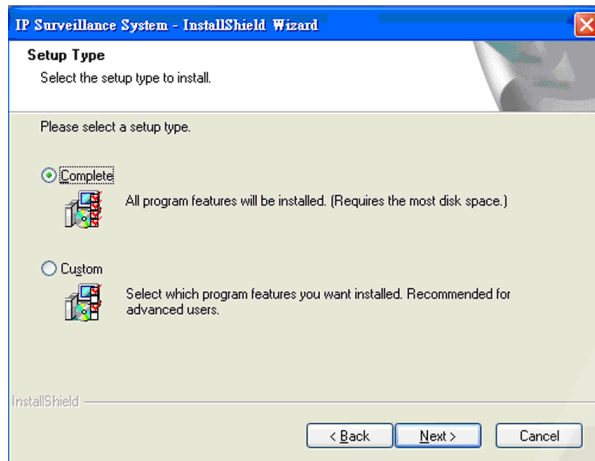

Pic. 1.4

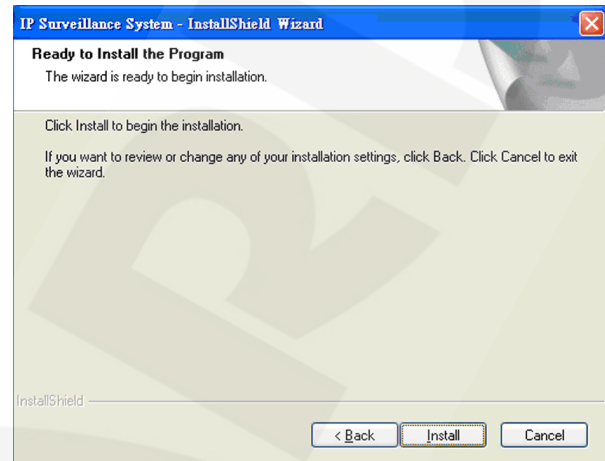 

Pic. 1.5

 
Custom Setup Type (*Pic. 1.6*):

Step 7: install the system to a preferred directory. Or select whichever feature(s) you wish to install.


Step 8: check the option “Custom”.

Step 9: select which program features you want to install. This is recommended for advanced users.

Step 10: select folder where setup will install files (*Pic. 1.7*).

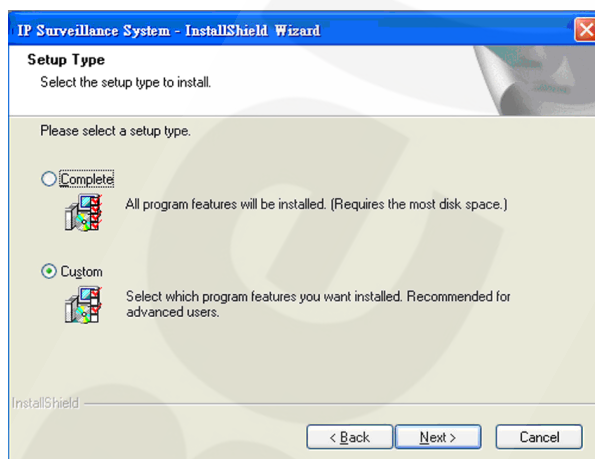

Pic. 1.6

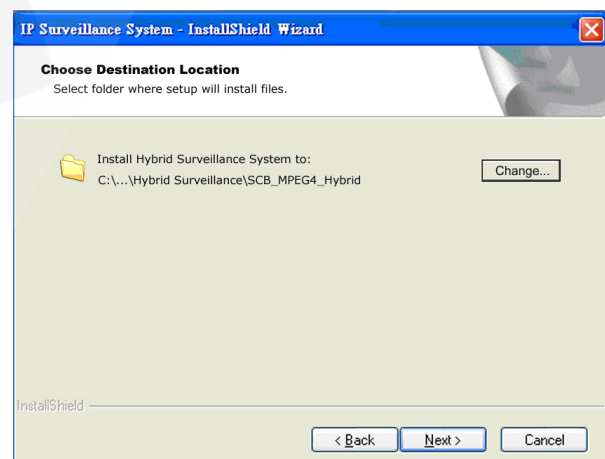 


Pic. 1.7


Step 11: select the features setup will install (*Pic. 1.8*).

For example, select only Playback for installation. Install and use only these features on multiple remote sites at home or anywhere with a PC.

 Step 12: press **[Finish]** to finish the installation (*Pic. 1.9*).

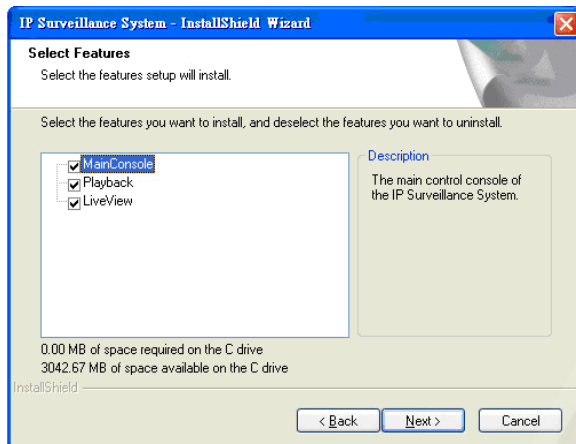


Pic. 1.8

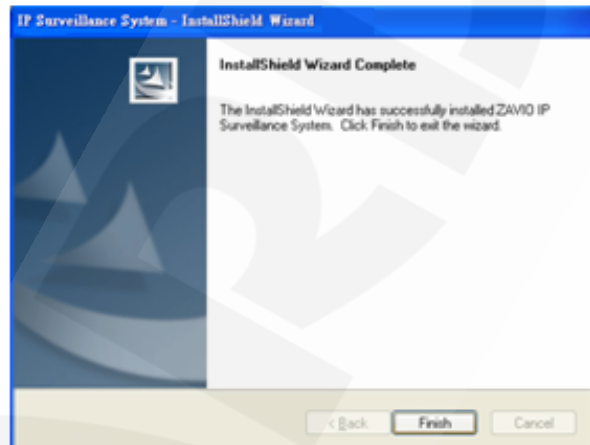 


Pic. 1.9

 Step 13: execute the Main Console (*Pic. 1.10*).

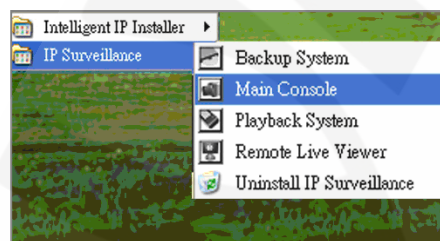

Pic. 1.10

 Enter the password you like into the edit box and enter again at the edit of Password Confirm. And then press **[OK]** (*Pic. 1.11*). Now enjoy our Intelligent Surveillance Solution.

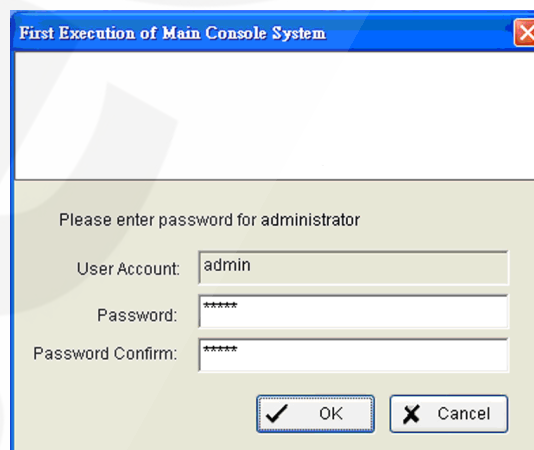

Pic. 1.11

1.3. Quick start

1.3.1. Install IP camera(s)

Step 1: setup the IP camera(s) following by the instruction manual provided by the manufacturer.

Step 2: check the network between the IP camera(s) and the system.

 
Step 3: add the IP camera(s) to the system following below steps.

1.3.2. Add IP camera(s)

Step 1: go to Start > All Programs > IP Surveillance > Main Console.


Step 2: type in user name and password and log on to the system.

Step 3: in Main Console, go to Config > Setting to obtain the Setting panel (Pic.1.12).

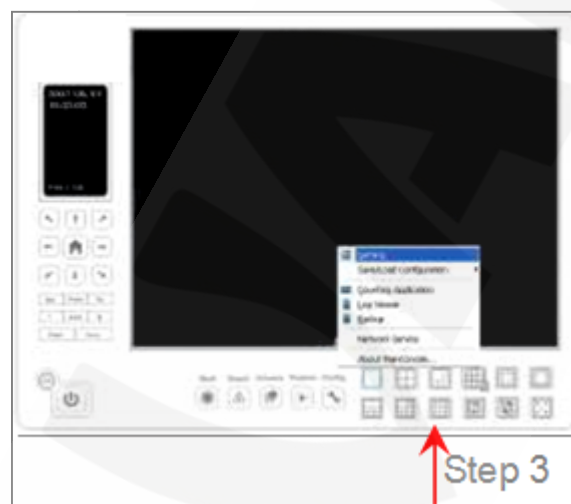

Pic. 1.12

 Step 4: go to Camera tab (Pic. 1.13).

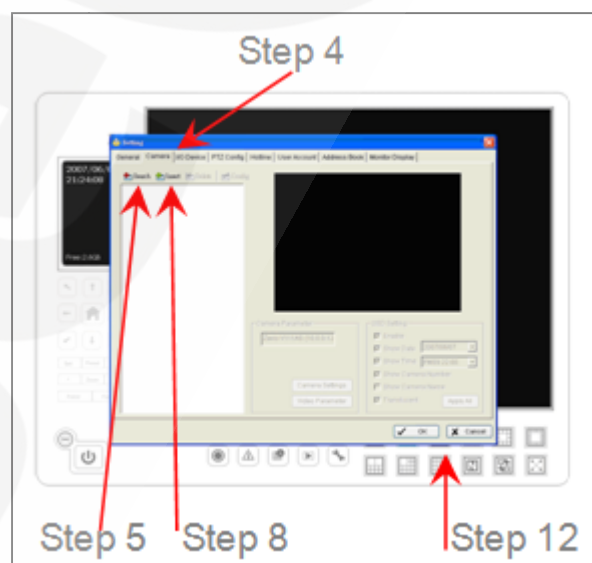

Pic. 1.13

NOTE!

If your IP cameras support UPnP. Follow step 5. Otherwise, follow step 8.

Step 5: click **[Search]** to search for the IP cameras that are available at this point (Pic. 1.13).

NOTE!

Search function just supports the IP cameras with UPnP supported.

Step 6: select one of the IP cameras that are available; check the option and enter the username and password.

Step 7: click **[OK]** to add the camera.

 
Step 8: click “Insert” to insert the IP cameras (Pic. 1.13).

Step 9: enter the IP address or domain name (check the “Use DNS” option), Http Port, Username, and Password (Pic. 1.14).

Step 10: click “Auto Detect” (Pic. 1.14).

Step 11: click **[OK]** to add the camera (Pic. 1.14).

Step 12: click **[OK]** to exit the Setting panel (Pic. 1.13).

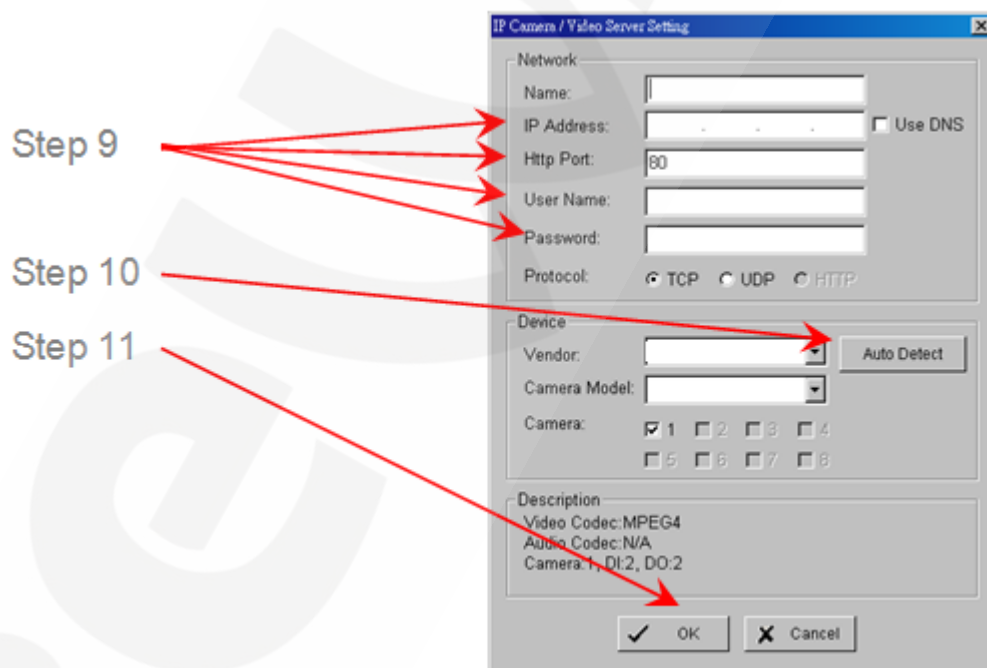


Pic. 1.14

1.3.3. Set schedule

Step 1: go to Start > All Programs > IP Surveillance > Main Console.


Step 2: type in user name and password and log on to the system.

 Step 3: in the Main Console, go to Schedule (Pic. 1.15).

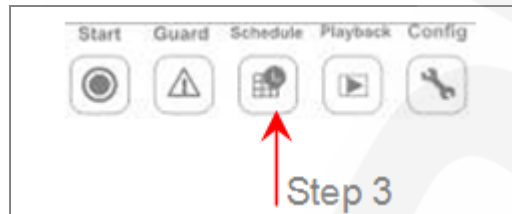

Pic. 1.15

 Step 4: by default, when inserting a camera to the system, the recording schedule is automatically set to be 24 hours a day, always record (Pic. 1.16).

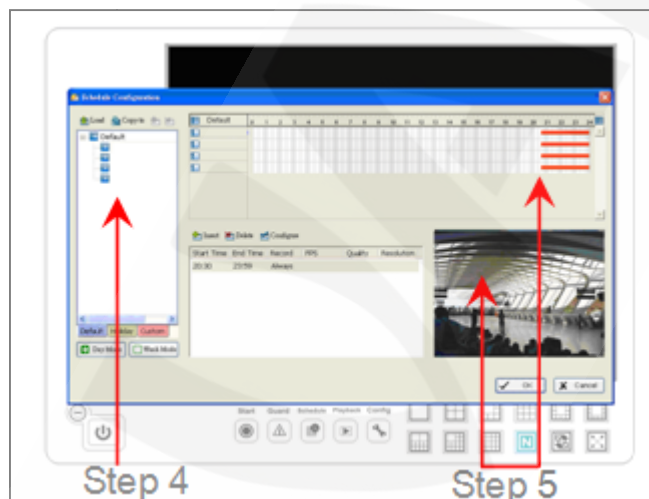

Pic. 1.16

Step 5: click Configure on the selected camera schedule or double click on any schedule bar to modify the recording mode (Pic. 1.16).

Step 6: when the schedule settings are completed, click **[OK]** to update the recording schedule.

Step 7: click **[OK]** again to go back to the Main Console.

1.3.4. Set smart guard

Step 1: go to Start > All Programs > IP Surveillance > Main Console.

Step 2: type in user name and password and log on to the system.


Step 3: in the Main Console, go to Guard (Pic. 1.17).



Pic. 1.17

Step 4: select a camera and then click on "Insert Event" (Pic. 1.17).

 Step 5: select General Motion as the event type, click **[OK]** (Pic. 1.18).

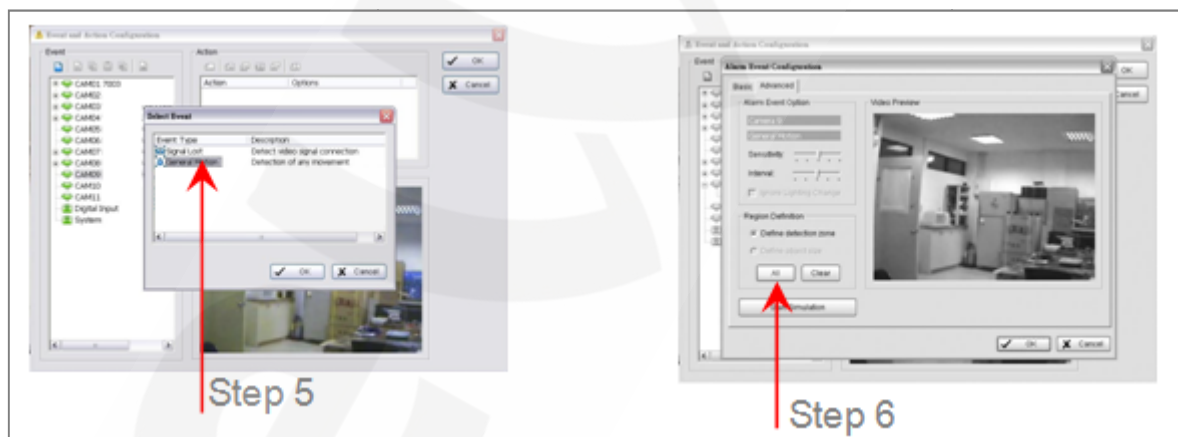

Pic. 1.18

Step 6: In the alarm Event Configuration panel, set the detection zone as all, and then click **[OK]** to exit the panel.

Step 7: click **[OK]** to go back to the Main Console.

1.3.5. Start recording & smart guard

Step 1: go to Start > All Programs > IP Surveillance > Main Console.

Step 2: type in user name and password and log on to the system.

Step 3: in the Main Console, go to Start.

 
Step 4: click on “Start Recording Schedule” and “Start Smart Guard System” to initiate the two functions.

1.3.6. Playback

Step 1: go to Start > All Programs > IP Surveillance > Main Console.


Step 2: type in user name and password and log on to the system.

Step 3: in the Main Console, go to Playback (Pic. 1.19).

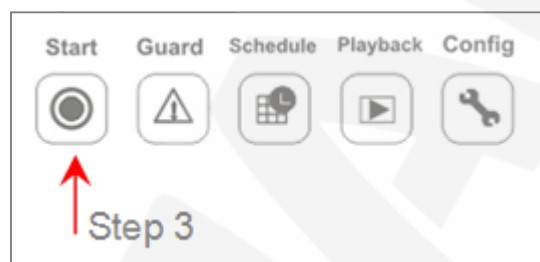

Pic. 1.19

 
Step 4: in the Playback window, click on the Date Time Icon (Pic. 1.20, 1.21).

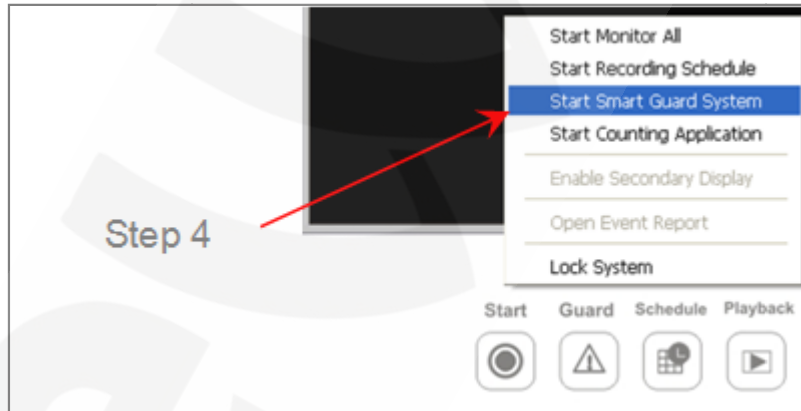

Pic. 1.20

Step 5: in the time table, recorded files are displayed in color bars. Highlight any color bars to select playback section. Click [OK] to return to Playback Console (Pic. 1.21).

 Step 6: the recorded files are ready to view now.

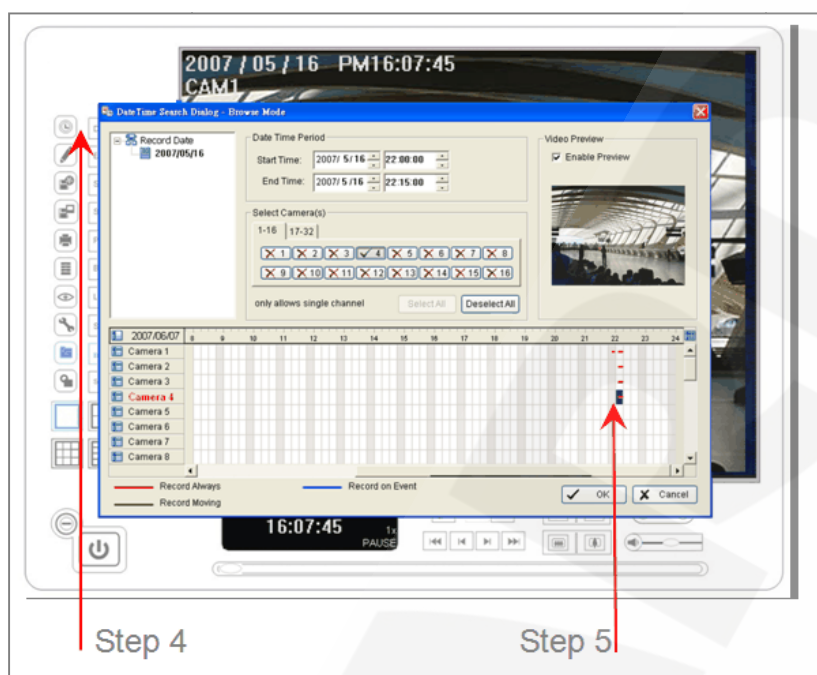

Pic. 1.21

Chapter 2. Main console


This is the main operation system window - to activate, schedule recording, setup smart guard and configure system setting. *Picture 2.1.*



Pic. 2.1


Exit: shut down the Surveillance System or log out current user (*Pic. 2.2*).

 Minimize: minimize the Main Console window (*Pic. 2.2*).

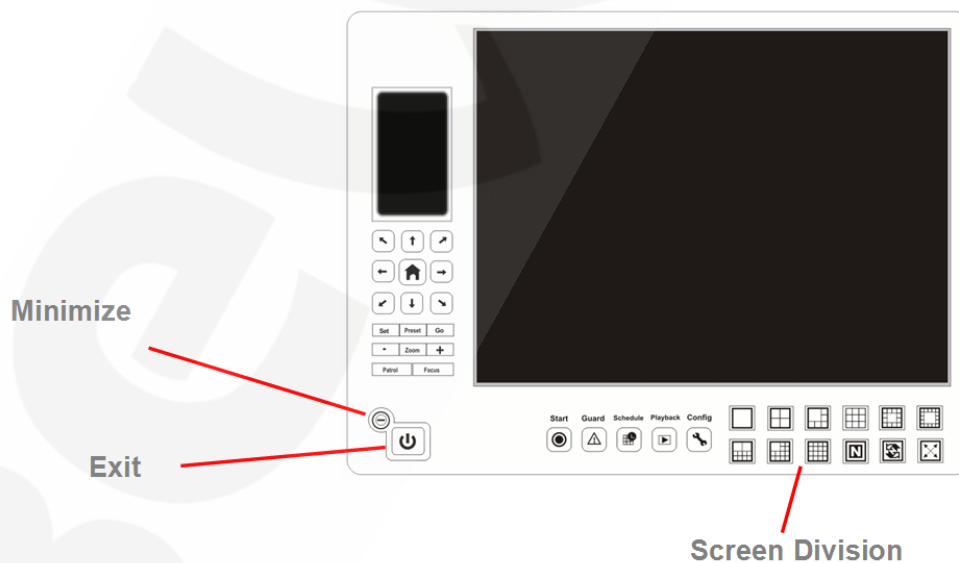

Pic. 2.2

 Screen division: allocate the sub-screen display by clicking on the desired layout icon. To switch to single camera display, double click on a particular sub-screen. Double click on the screen again to regain previous screen division layout (*Pic. 2.3*).

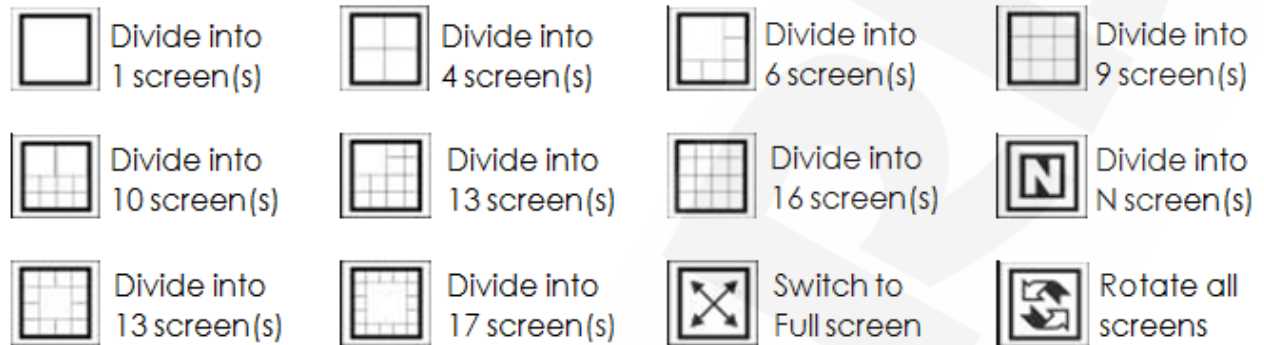

Pic. 2.3

2.1. Start

START: click on the Start icon (*Pic. 2.4*) and select from the drop down menu to activate/deactivate: (a) Recording Schedule System, (b) Smart Guard System, or (c) Counting Application. Select Start/Stop Monitor All to activate/ deactivate all the functions at once.



Pic. 2.4

NOTE!

 
When activating any of the monitor functions, system considers the current screen status as normal. Therefore, if you want to, for example, detect a missing object, be sure the object needed to be protected is in its position at the moment you click Start button.

Playback: click on the icon to get Playback Console. You can watch recorded video, search recorded video, adjust image of the stored data, save video/ pictures, print images, check log information and event records, and set up recording function configuration (see Chapter 3.Playback for detail) (*Pic. 2.5*).

Schedule: organize recording time schedule and setup recorder configuration. See Chapter 4.Schedule for detail (*Pic. 2.5*).


Guard: add/edit type(s) of events that you want to detect; setup reaction(s) responding to events. See Chapter 5.Guard for detail (*Pic. 2.5*).

Config: select from the drop down menu to modify general setting, save/ load configuration settings, start counting application, access log viewer and backup files, or setup network services. See Chapter 6.Configuration for detail (*Pic. 2.5*).

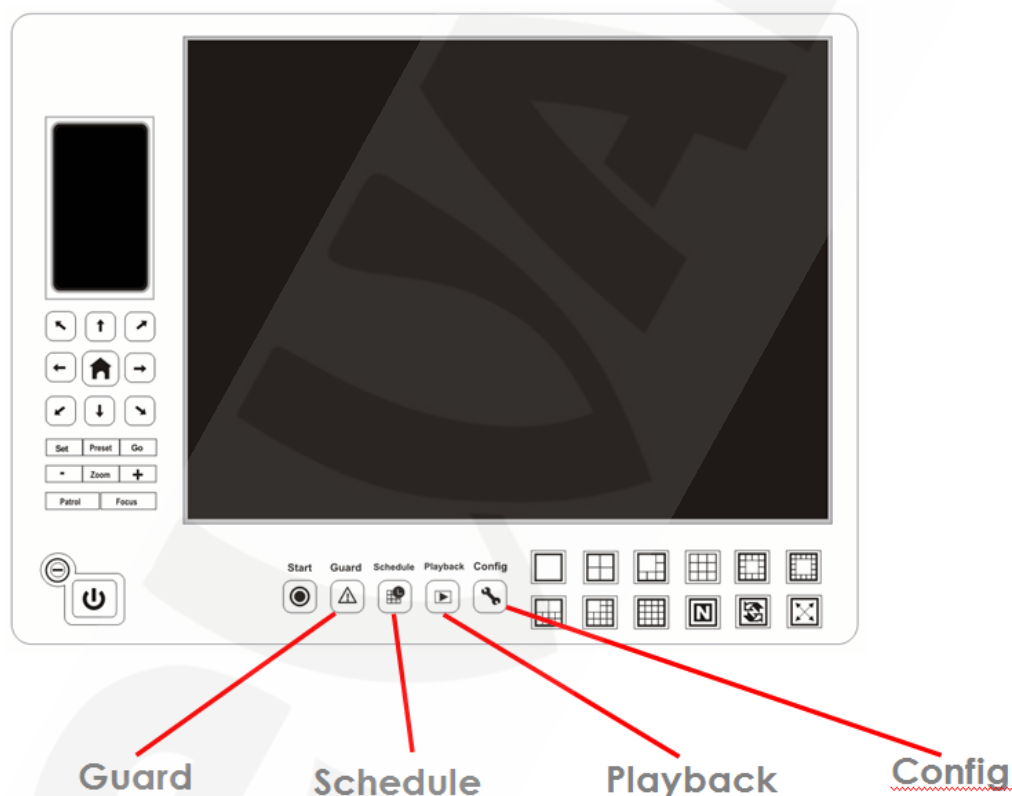

Information
Window

 PTZ Camera
Control

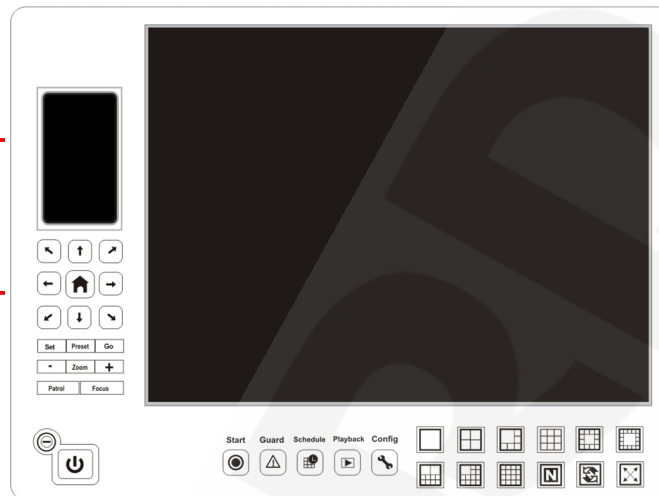

Pic. 2.6

Preset/ go: adjusts the camera view. Click on the Set icon and set up the view as the preset point 01. Adjust the camera view again and set up the preset point 02. Repeat the process until finish setting up all preset points. You can enter any names you like to instead of the preset point 01, preset point 02, preset point 03.

Click on the Go icon and view the result of your setting.

 
Zoom: click on the + and – signs to zoom in and zoom out the view.

Focus: you can select to have the camera focused near or far. To focus near means objects that are closer will be clearer than the objects that are further away. On contrast, to focus far means objects that are further will be clearer than the objects that are closer.

Click on the Focus icon and select auto focus if you want the system to decide the focus point for you.

Patrol: go to Patrol > Set Patrol to obtain the Patrol Setup dialog. From the left window, select the cameras that you would like to have in the patrol group. Align the cameras in order in the right window and adjust the time. Rename the group name if you want. After completing the setup, check the Active option, and then click **[OK]**.


You can setup up to four groups of auto patrol. To start or stop, click on the Patrol icon in the Main Console, and select Start Patrol or Stop Patrol (Pic. 2.7).

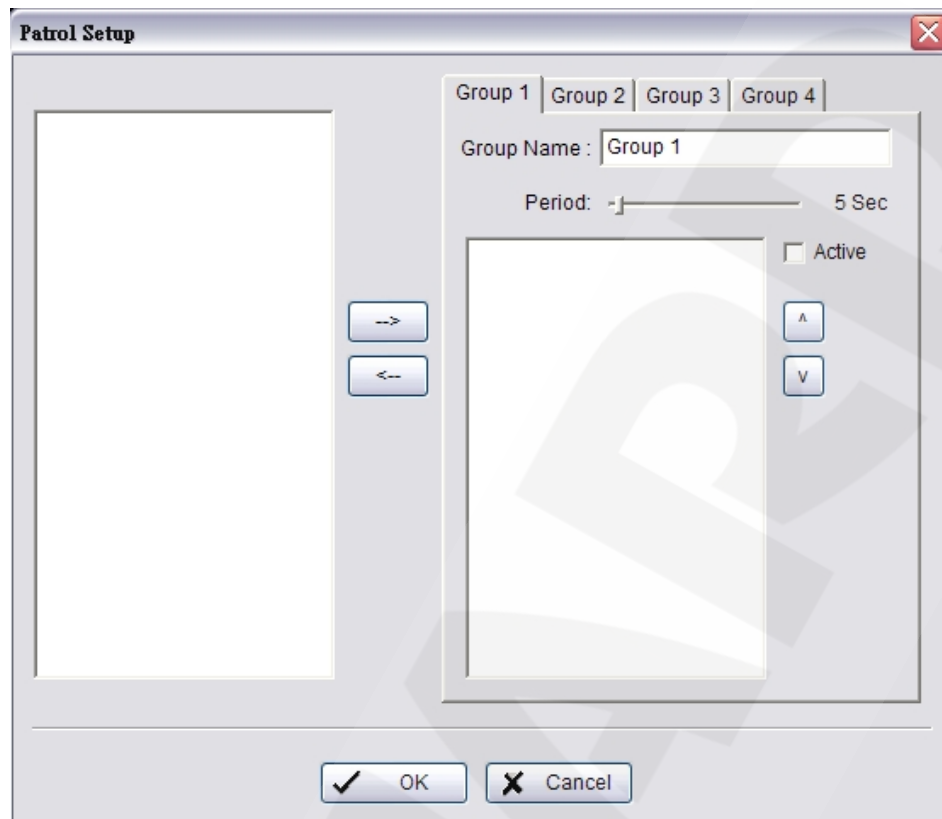

Pic. 2.7

2.4. On screen menu

 Right click on the camera screen and get the On Screen Menu, from which you can enable move, enable digital PTZ, and connect/ disconnect the camera. *Picture 2.8.*

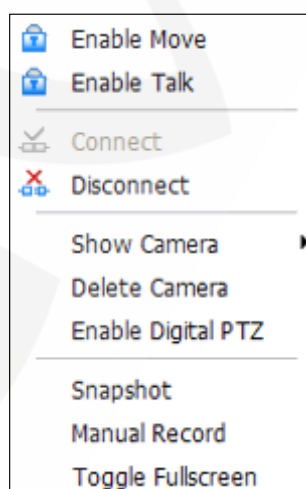

Pic. 2.8

Enable move: with cameras that support PT function, by selecting the enable move function, you may adjust the camera's view by clicking on the display screen. To cancel this function, right click on the screen and select Disable Move.

NOTE!

You can only work on current camera after clicking Enable Move.

Enable talk: with cameras that support two-way audio, you may select “enable talk” to utilize the function.

Connect/ disconnect: right click on the display screen and select Connect/ Disconnect to modify the connecting status of the camera.

Show camera: select the camera to be displayed from the Show Camera Menu.

Delete camera: click on Delete Camera to remove a camera from the display screen. This does not delete the camera from the setting list.

Enable digital PTZ: to enable the PTZ functions of the camera, select the Enable digital PTZ option. When enable digital PTZ, we can use mouse wheel to zoom in and zoom out on the camera.

NOTE!

Enable Digital PTZ is the option function in IP+ software not in IP software

Snapshot: select the snapshot function to capture a specific video image immediately. You have the options to copy the image to the clipboard or to save it.

Manual record: start recording video by selecting manual record.

Toggle full screen: to view a specific channel with full screen.

Chapter 3. Playback

Watch the recorded video, view and/or search for unusual events and recorded system information. *Picture 3.1.*



Pic. 3.1

Minimize: minimizes the Playback console (*Pic. 3.2*).

Exit: shuts down the Playback console (*Pic. 3.2*).

Scroll bar: indicates the status of the playing video; drag it to where you want to view (*Pic. 3.2*).

Control: play, pause and stop the video (*Pic. 3.2*).

Cue: when playing video, click on the Cue In/ Cue Out icon at where you want to set as the starting/ ending point of a saved video clip. The Cue In and Cue Out time will be displayed on the Playback Information Window once they are set (*Pic. 3.2*).

Speed: control the speed of the playing video. Click **[+]** to speed up and **[-]** to speed down (*Pic. 3.2*).

Zoom: zoom in and zoom out. Get a close up view of the recorded video; move to the spot you want to view by dragging the screen (*Pic. 3.2*).



Pic. 3.2

3.1. Information window

Displays video date and time, current video status, cue in/ out points' time, and speed (Pic. 3.3).

3.2. Audio volume control

Adjust the sound level (Pic. 3.3).

3.3. Screen division

 
Allocate the sub-screen display by clicking on the desired layout icon. To switch to single camera display, double click on a particular sub-screen. Double click on the screen again to regain previous screen division layout (Pic. 3.3).

3.4. Browse mode

Plays the recorded video (Pic. 3.3).

3.5. Date time


Click on Date - Time to access the Date - Time Panel and withdraw the video record that you want to review.

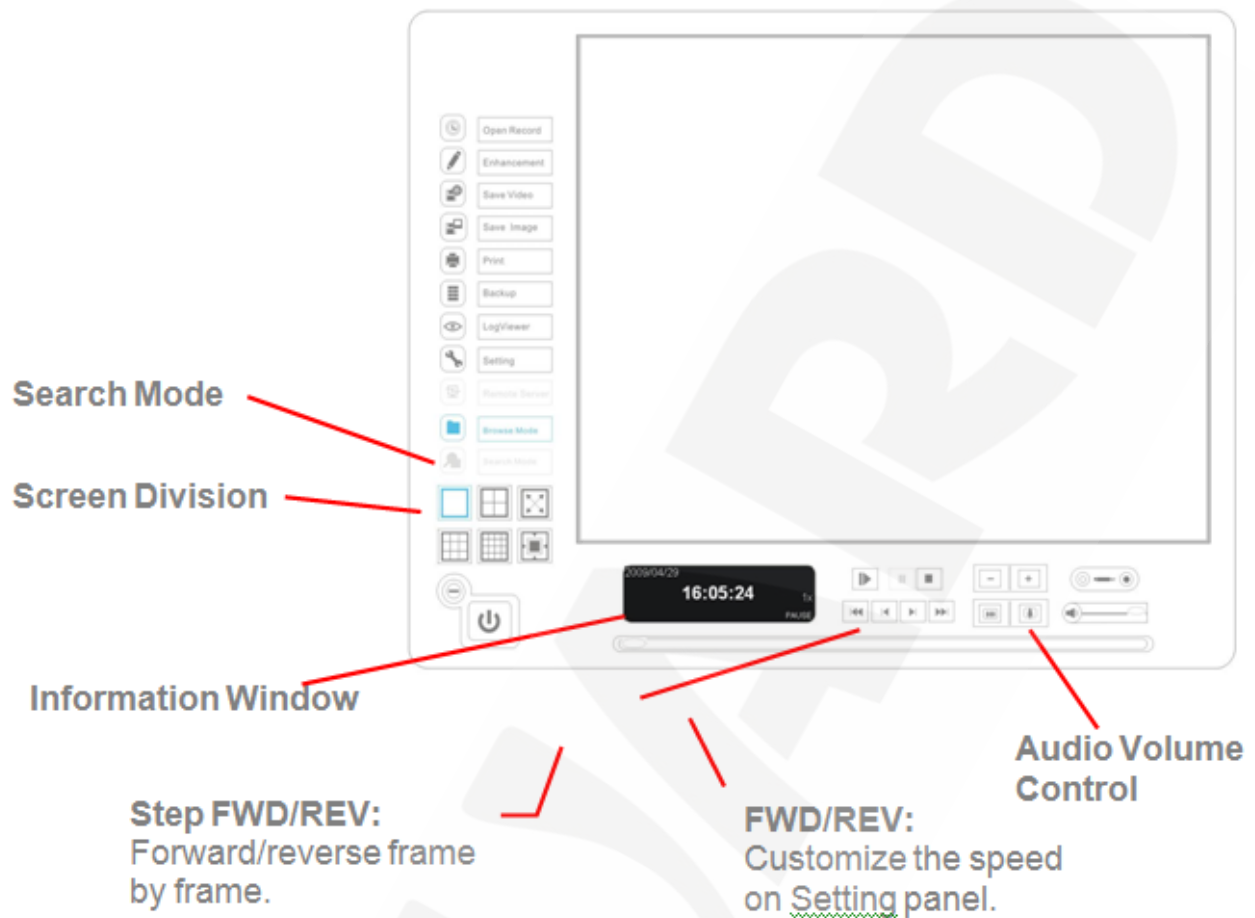

Pic. 3.3

Date time panel

 Withdraw the records (Pic. 3.4).

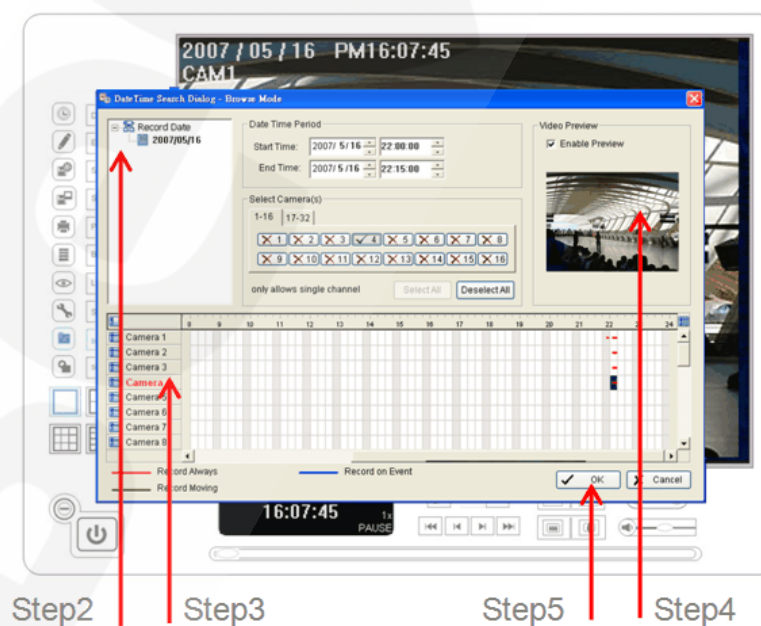

Pic. 3.4

Step 1: from the window at the top left of the Date -Time Panel, select the date you want to check, and you will see red/green lines show on the time table implying available recorded video.

Step 2: you can select the video clip you want to review by left-clicking and dragging to highlight the time period. Besides using the time-table, you can also indicate the time period of video that you want to see by using the Start Time and End Time in Date Time Period section.

Step 3: in Select Camera(s) section, select the camera(s)/channel(s) from which you want to see the video. You can select all cameras by clicking [**Select All**] button.

Step 4: check "Enable Preview" to get the preview of the video you select.

Step 5: click [**OK**] when you are done with the settings.

3.6. Enhancement

General setting: check the option and chose whether you want to apply the setting to all the channels or only to those currently shown on the screen.

Filter setting

- Visibility: check the option and adjust the gamma value of the image to enhance the image and make it cleaner.
- Sharpen: check the option to activate the function. Move the slider control to the right to sharpen the image, to the left to soften it.
- Brightness: check the option to activate the function. Move the slider control to the right to make the image brighter.
- Contrast: check the option to activate the function. Move the slider control to the right to increase contrast.
- Grey Scale: check the option to show the record in grey scale mode so the image displays in black and white.

3.7. Save video

Step 1: click on the display screen to choose the camera display that you want to save as a video clip.

Step 2: set up the cue in and cue out points; the cue in and cue out time will be displayed at the information window.

Step 3: click Save Video icon, choose the folder where you want to save the file at, enter the file name and click SAVE. You may export (i.e. save) the record with both audio and video or video only.

Step 4: choose the compression format and then save the video.

3.8. Save image

Step 1: click on the display screen to choose the camera display from which you want to save pictures.

Step 2: click **[Save]** Image button when the image you want is shown on the screen. You may click Pause to freeze the video, use Step Forward/ Step Backward function to find the picture(s) that you want to save.


Step 3: choose the folder and the format of image (BMP or JPEG) you prefer and then click save.

NOTE!

You can skip step 3 by pre-setting a folder and format that you want to save the images.

3.9. Print

Print the current image of the video you choose (*Pic. 3.5*).

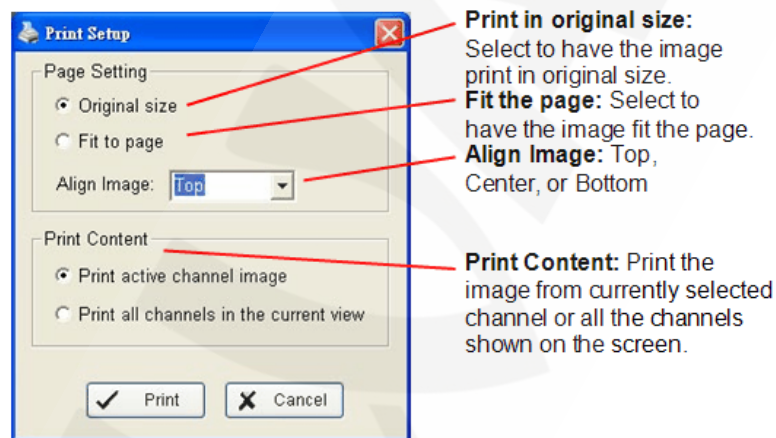 

Pic. 3.5

3.10. Backup

Different from Save Video, the Backup function saves everything from the Playback panel, including log information.

 
You can start a full function Playback Console and load the backup files into it on any PC with Windows operating system. This means you may monitor the real time video and work on the backup files on separate computers simultaneously (*Pic. 3.6*).

Step 1: press the "Open Record" to select data and press **[Backup]**.

Step 2: you can adjust the Start Time and End Time you want to backup.

Step 3: you can adjust the Cameras you want to backup.

Step 4: you can calculate the size of the backup data.

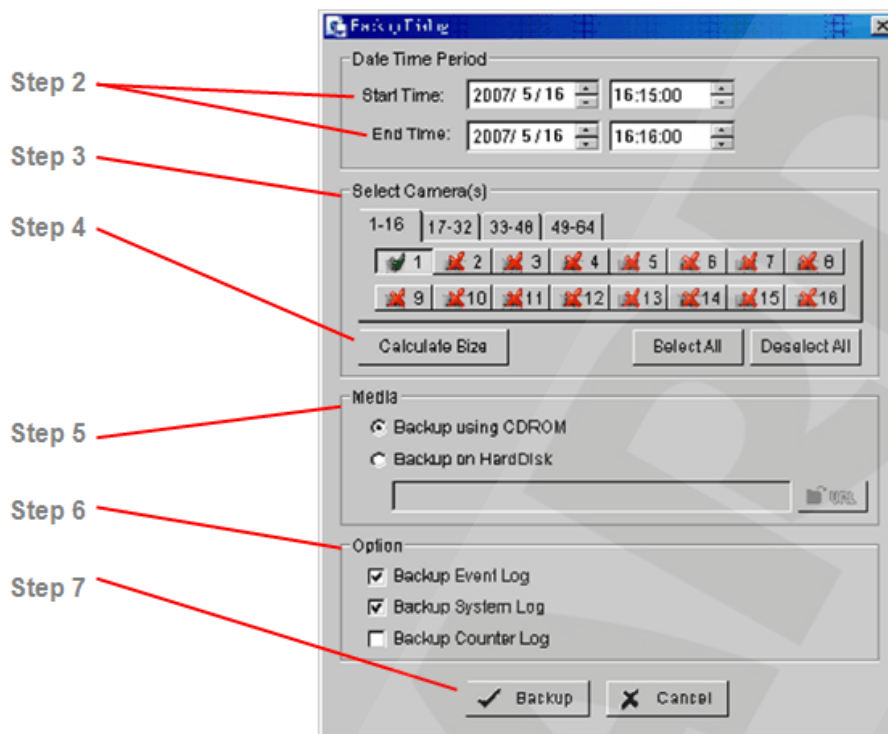

Pic. 3.6

 
Step 5: select the directory you want to save the backup data.

Step 6: check the log you want to backup.

Step 7: press the **[Backup]** to start backing up.

3.11. Log viewer

Unusual event: view the unusual event history that had been detected by the Smart Guard System.

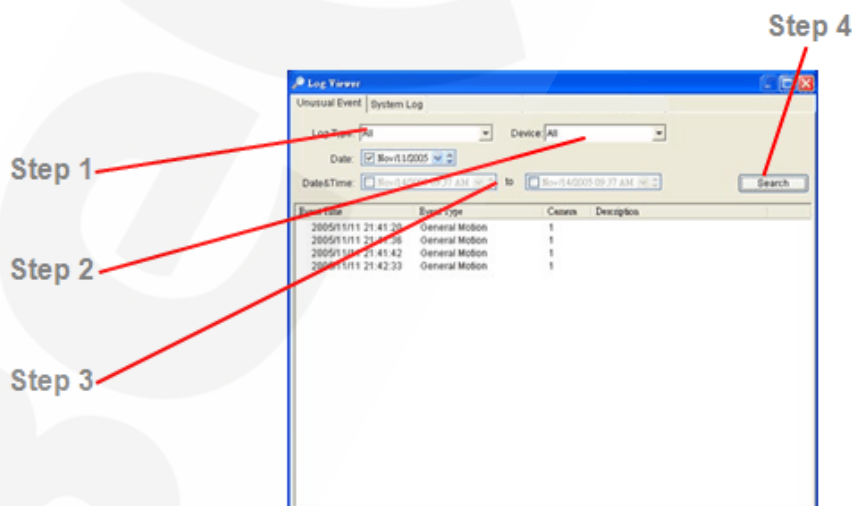

Pic. 3.7

Step1: choose the type of events you wish to view or select "All" from the drop-down menu to view all types of events (Pic. 3.7).

Step 2: choose the camera channel you wish to view or select “All” for all the channels available (Pic. 3.7).

Step 3: you can either view the events that happened on a particular date or during a given time period. To search and view unusual event on a particular date, check the option right next to “Date” and select a specific date (Pic. 3.7).

You may also point out two different time points and search for unusual event happened during the period. Check the options in the Date & Time columns and enter the date and time.

 
Step 4: click [Search] (Pic. 3.7).

NOTE!

When working with a video record:

1. Log Viewer will search for Unusual Event in the video record in Date & Time mode, start from the beginning to the end of the record, which is the default setting of the system.
2. A link will appear right next to each event time. By clicking on the link, the video will jump to the point where the unusual event takes place.

System log: select Log Type form the drop-down menu. There are total 11 types of log types, including (Pic. 3.8).

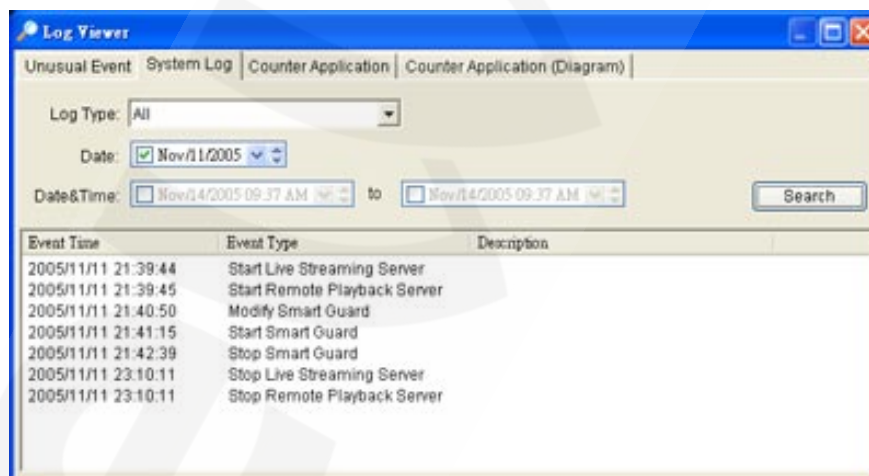

Pic. 3.8

1. Main Console Startup
2. Main Console Shutdown
3. User Login
4. User Login Failed
5. Start Schedule
6. Stop Schedule
7. Execute Recycle
8. Execute Backup
9. Enable Channel
10. Disable Channel
11. Start Smart Guard
12. Stop Smart Guard
13. Modify Smart Guard
14. Modify Schedule
15. Modify Configuration
16. Start Live Streaming Server
17. Stop Live Streaming Server
18. Modify Live Streaming Server
19. Start Remote Playback Server
20. Stop Remote Playback Server
21. Modify Remote Playback Server
22. IP Camera Connection Lost

Step1: choose the type of event you wish to check or select “All” from the drop-down menu and view all types of events.


Step 2: you can either view the events that happened on a particular date or during a given time period. To search and view unusual event on a particular date, check the option right next to “Date” and select a specific date.

You may also point out two different time points and search for unusual event happened during the period. Check the options in the Date & Time columns and enter the date and time.

Step 3: click **[Search]**.

Chapter 4. Schedule

 Click on the Schedule icon on the Main Console and set up the time duration for video recording on the schedule configuration panel (Pic. 4.1).

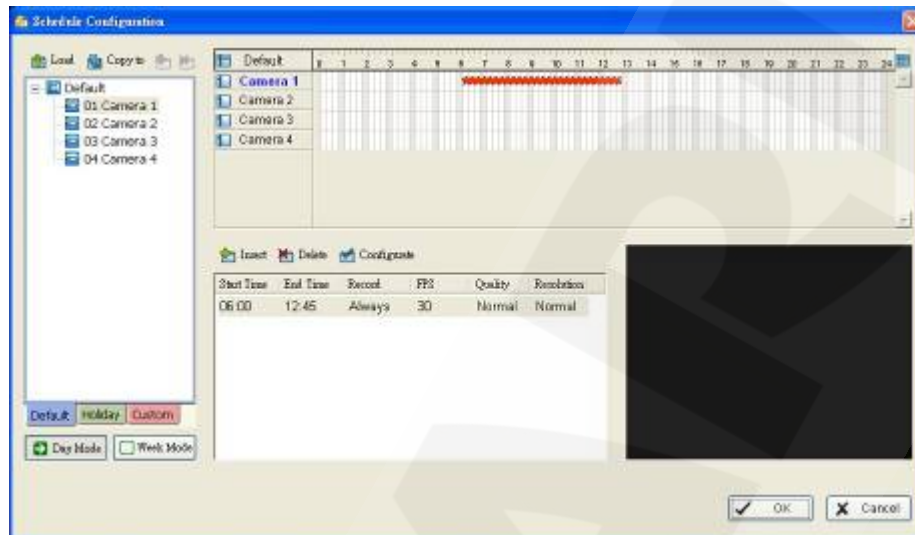

Pic. 4.1

4.1. Day mode

Schedule the cameras to turn the recorder on and off at the same time every day according to your setting (Pic. 4.2).

To setup the time schedule for each camera, you may:

- Load the preset modes.
- Insert a new schedule manually.

4.2. Load preset modes

Click on the Load icon for the drop-down menu (Pic. 4.2).

Regular mode: video recording 24 hours a day with the setting of 30 FPS (frames per second), Normal video quality and Normal resolution.

Office mode: video recording from 8 am to 8 pm (08:00 – 20:00, shown on the red bar in the Schedule Configuration panel) with 30 FPS, Normal video quality, and Normal resolution.

 
Shop mode: video recording from 10 am to 10 pm (10:00 – 22:00) with 30 FPS, Normal video quality, and Normal resolution.

High security mode: video recording 24 hours a day with the setting of 30 FPS, the highest video quality, and High resolution.

Disk saving mode: the system will start recording only when a motion is detected on the screen, 24 hours a day (shown on the green bar in the Schedule Configuration panel), with the

setting of 30 FPS, Normal quality, and Normal resolution. You can adjust sensitivity, interval, and area of motion detection in the Schedule Configuration.


Minor mode: the system will start recording only when a motion is detected on the screen, 24 hours a day (shown on the green bar in the Schedule Configuration panel), with the setting of 15 FPS, Low quality, and Low resolution. You can adjust the sensitivity, interval and area of motion detection in the Schedule Configuration.

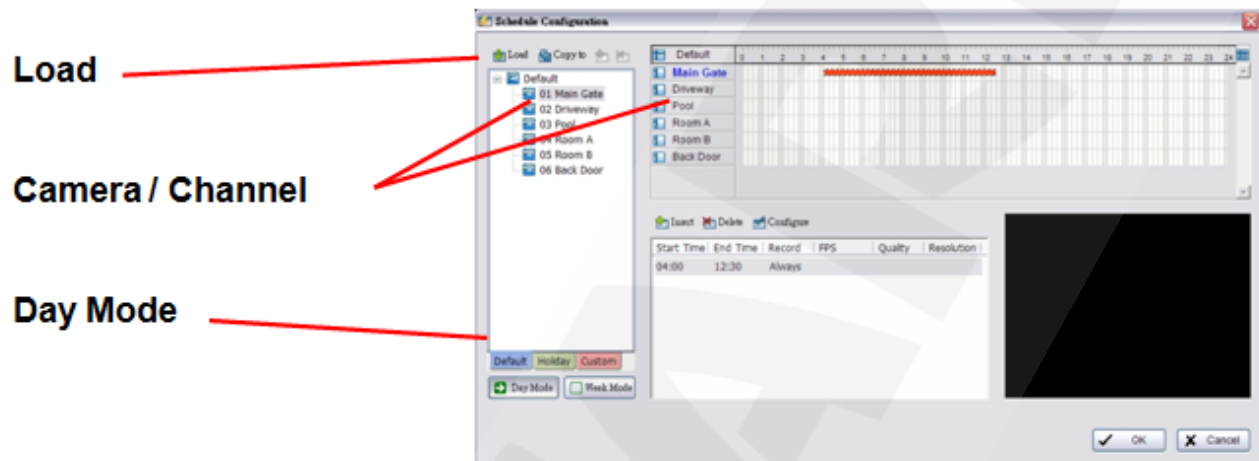

Pic. 4.2

4.3. Insert a new schedule manually

 Step 1: click left mouse button and draw the bar you want to the time table. The scheduled time will be shown as a grey bar (Pic. 4.3).

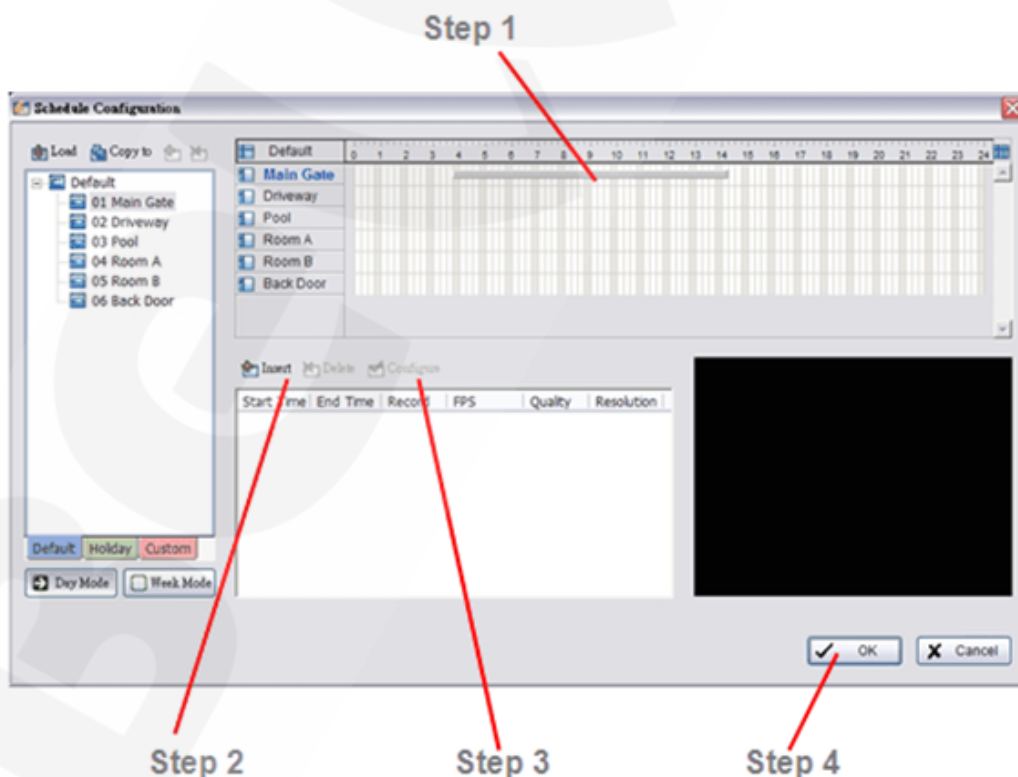

Pic. 4.3

Step 2: click the Insert icon and add a new schedule in the Regular Mode, i.e. to record video during the time period you set with 30 FPS, Normal video quality, and Normal resolution.

 
Step 3: change the setting if wished by clicking on the Configure icon or double click the schedule information.

Step 4: click [OK].

4.4. Copy schedule

You may set up the schedule for each channel/camera by repeating the process above, or simply apply the setting of a single camera to all the others (*Pic. 4.4*).


Copy To

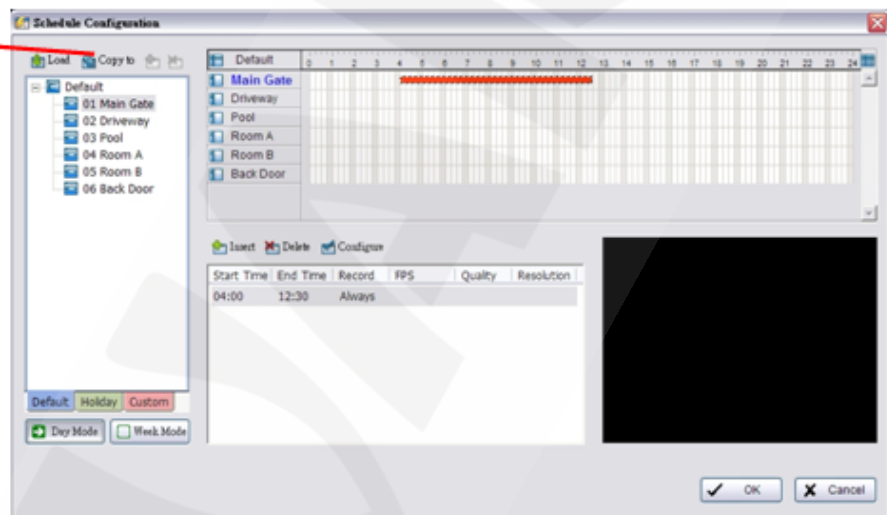

Pic. 4.4

4.5. Week mode

 Schedule the cameras for each day of the week differently. In addition, you may assign extra holidays under the Week Mode (*Pic. 4.5*).

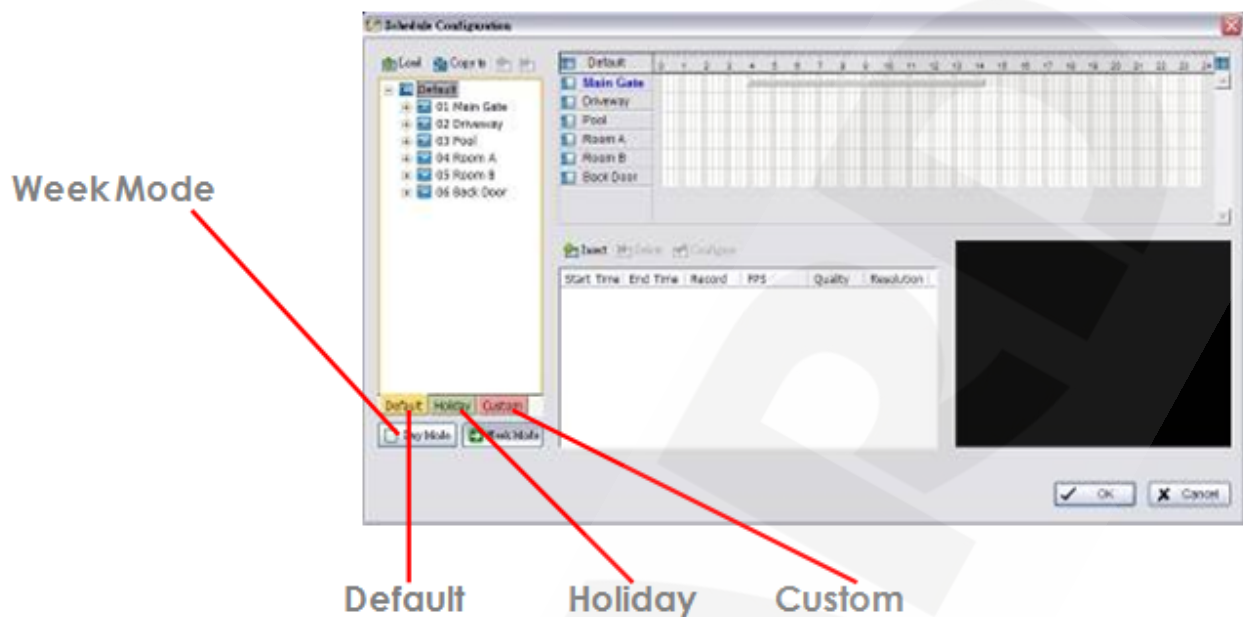

Pic. 4.5

Default: follow the same process to setup the schedule for every day in a week.


Holiday: you may assign holidays where the system will work according to the setting of Sunday.

Custom: you can assign a particular date(s) on which the system will work according to a special schedule(s) different from the others.

4.6. Adjust the scheduled setting

You can manually change the setting at any time after you insert or load a period of schedule.

 Option 1: move the cursor to the Time Bar (Pic. 4.6) and change the length or move the bar sideways to change the start and end points.

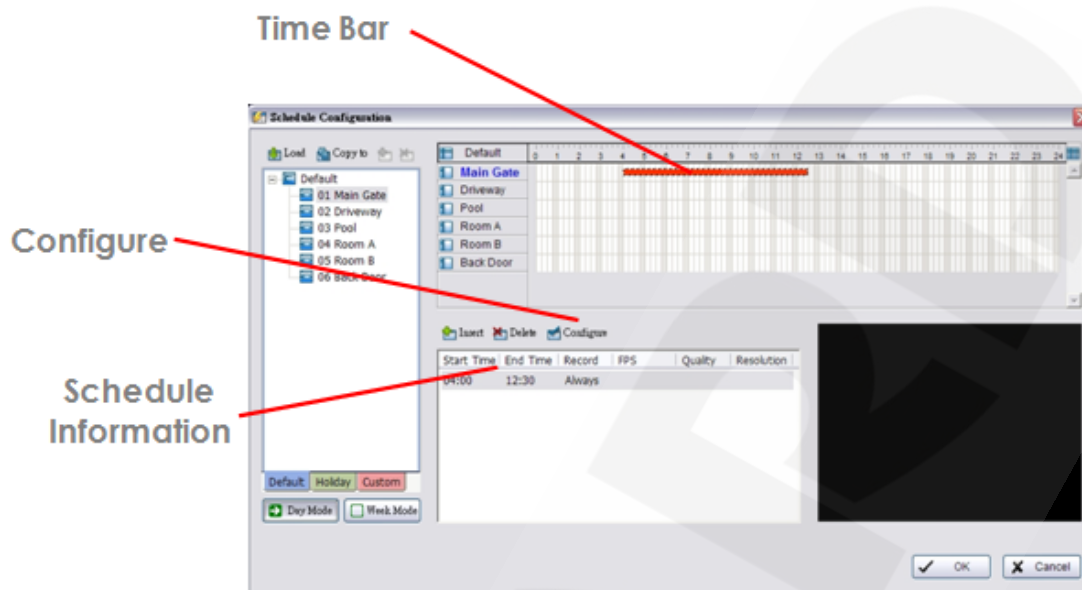


Pic. 4.6

Configure: click on the Configure icon (Pic. 4.6) to obtain the Encoding Option panel.

4.7. Encoding option panel

 Picture 4.7.

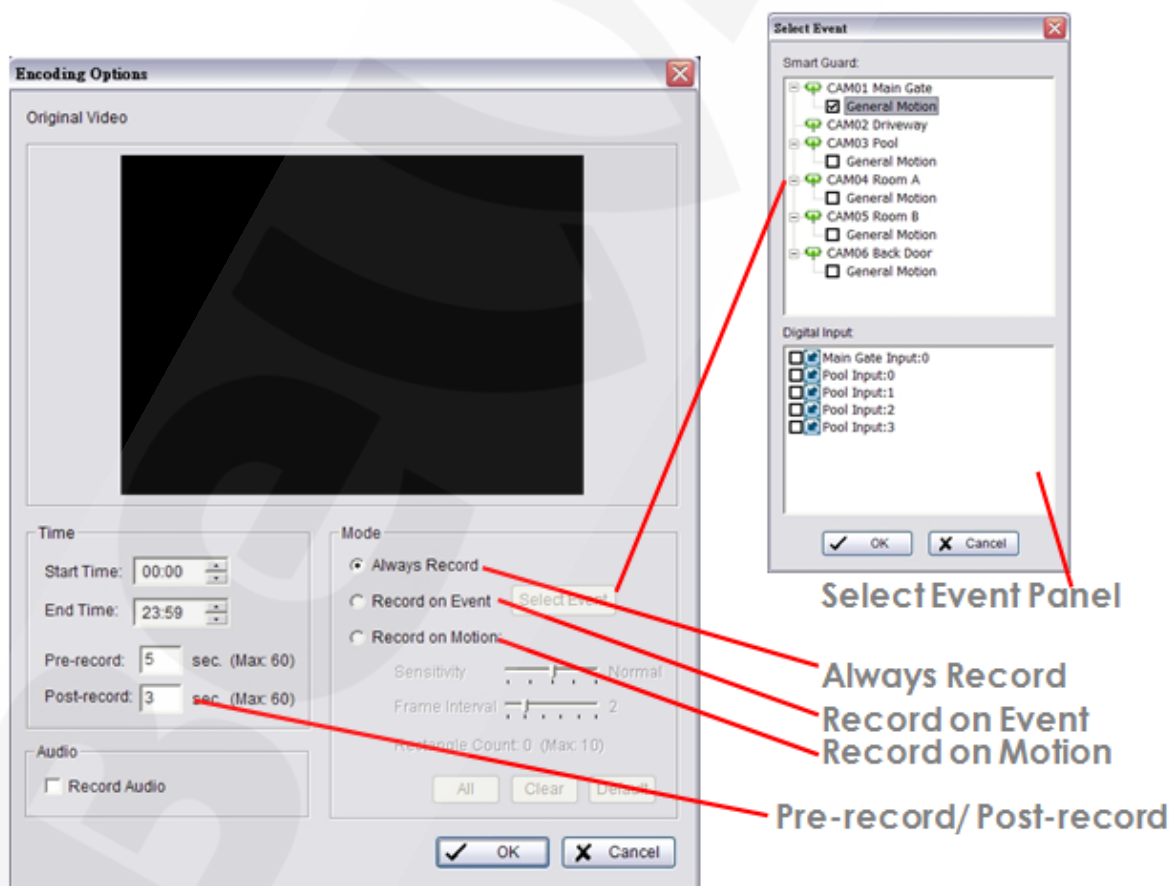

Pic. 4.7

Always record: select this option to record the video at all time.


Record on event (unable in bundle version): select this option to obtain the Select Event panel. From the Smart Guard list, check the box of the camera(s) that you want to trigger the recording action. Click **[OK]** to complete the setting.

Record on motion: select this option to start recording when a motion is detected. To detect Motion, you have to define a detection zone. Click left mouse button and drag the mouse to draw a detection zone. You may define more than one zone on the screen by repeating the same process. User can also click on **[All]** button to select the entire detection zone. You may adjust the sensitivity and the frame interval.

Pre-record/ post-record time: the pre-record/ post-record function saves the recording data accordingly. For instance, to set up a 5 second pre-record time means the system will start saving the recording data 5 seconds before the event happens.

Chapter 5. Guard

 Click on the Guard button on the Main Console to start the Event and Action Configuration panel. You need to specify an event to be detected as well as to set up an action with which the system will take when the specified event is detected (*Pic. 5.1*).

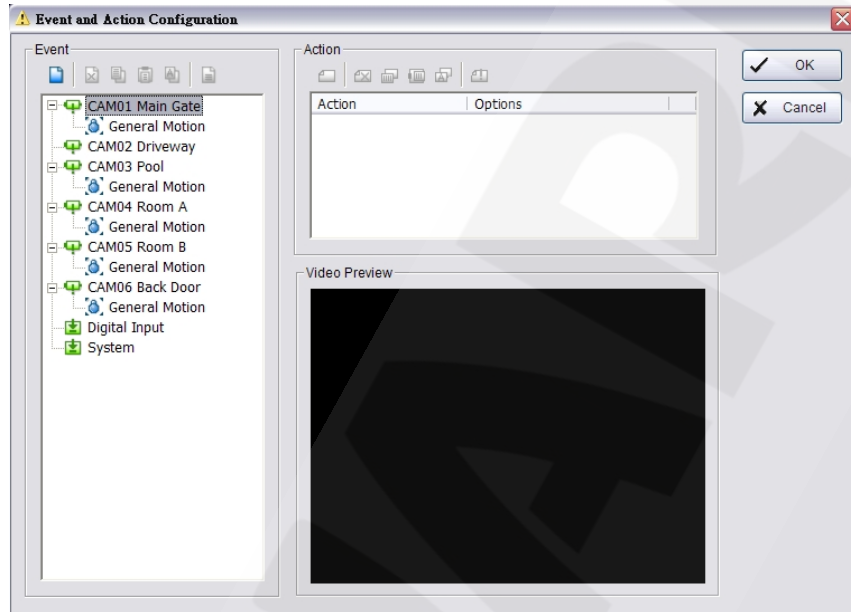


Pic. 5.1

5.1. Event

There are three sources of events: Camera (video image), Digital Input (device connected to you PC) and System (condition of your hardware). You can assign multiple events by following the instructions below.

Assign a camera event

 
Step 1: select a channel from the camera list and click the insert event icon. . *Picture 5.2*

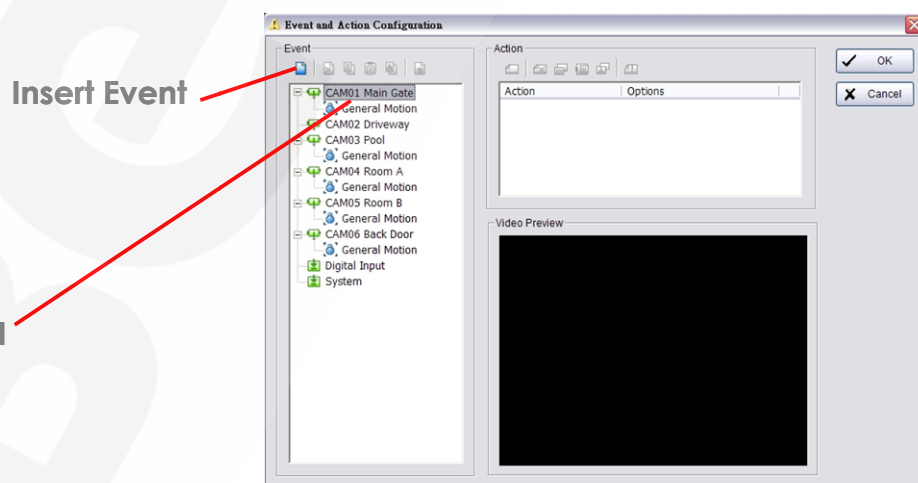

Pic. 5.2

Step 2: select the event you want on the Event Type list (*Pic. 5.3*) (for bundle version, only General Motion event is available), and then click **[OK]**.

 Step 3: configure the setting of the Event Type. See the following instructions (*Pic. 5.3*).

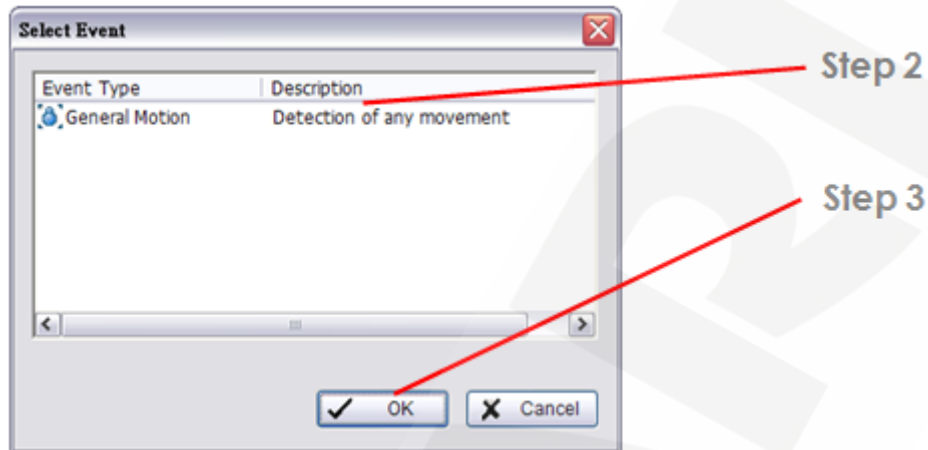

Pic. 5.3

5.1.1. Event - general motion

Detects any movement in the defined detection zone.

Basic setting


- Enable Event: check the box to activate (*Pic. 5.4*).

Life cycle

Picture 5.4.

- Automatically cancel event when event disappears: the alarm/action will be off once the abnormality is fixed or ends.
- Manually cancel event or event continues triggered: The alarm/action will continue until being canceled from the Main Console (Start>Open Event Report>Cancel All Events). The user currently not at the seat watching the screen will be notified by the alarm.

 Activated period: you can set up the system to react during a certain time period; for example, office hours (*Pic. 5.4*).

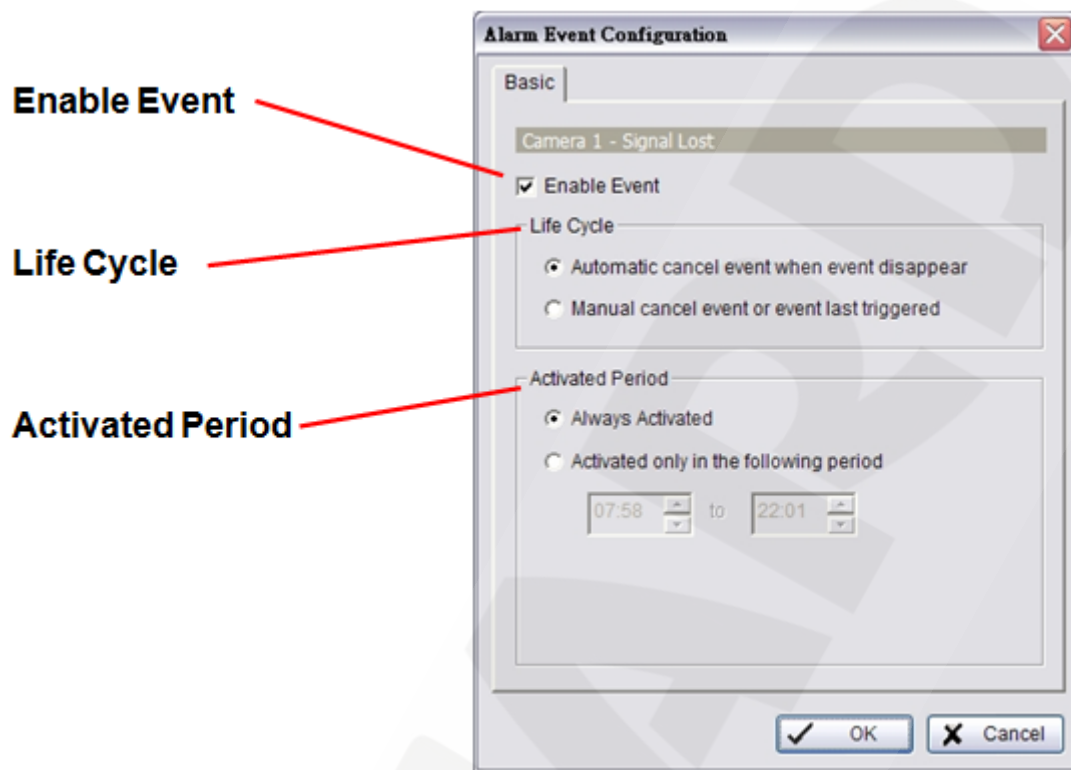

Pic. 5.4

 
Advanced setting

Sensitivity (Pic.5.5): click and move the slider control to the right to increase sensitivity so that a relatively small movement will trigger the alarm. Move the bar to the left to reduce the sensitivity of movement detection. Setting up an appropriate Sensitivity value will reduce the chance of false alarm. For example, you can lower the Sensitivity to avoid the alarm being triggered by a swinging tree in the breeze.

Interval (Pic.5.5): click and move the slider control to the right to increase interval time so that the alarm will only be triggered when the movement lasts longer. Move to the left to reduce the interval time.

Region definition (Pic.5.5): to detect General Motion, you have to define a detection zone. Click left mouse button and drag the mouse to draw a detection zone. You may define more than one zone on the screen by repeating the same process. User can also click on "All" button to select the entire detection zone.

Start simulation (Pic.5.5): click the Start Simulation button and test the function on the preview screen.

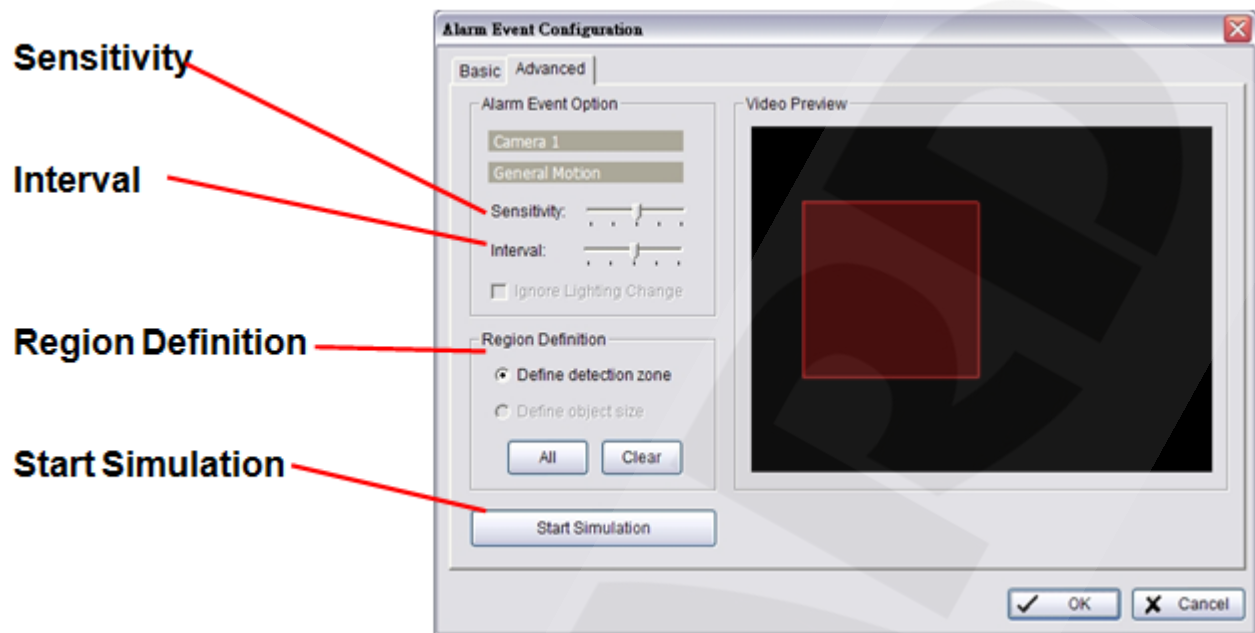

Pic. 5.5

 
5.2. Action

Insert action: to setup actions responding to an unusual event.

Step 1: choose an event and click the "Insert Action" icon (Pic. 5.6).

Step 2: there are 6 types of actions: On Screen Display, Play Sound. Select the action you want on Action Type list and then click [OK] (Pic. 5.6).

Step 3: configure the setting of the Action Type if needed.

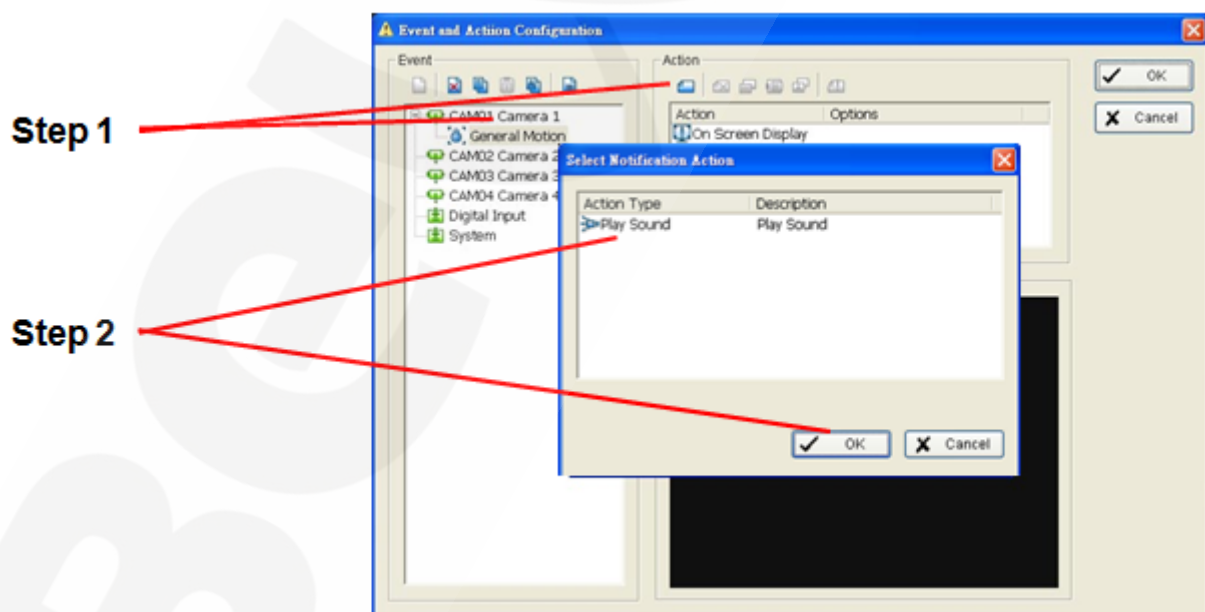

Pic. 5.6


Action - action type

On screen display: a red warning will be flashing on the screen of Main Console, indicating which type of unusual event is detected.

Play sound: sound alarm warning. Choose a Wave file (.wav) and the system will play sound as alarm when an unusual event is detected.

Chapter 6. Configuration

 Modify the setting, log viewer, backup, and network services. Click on the Config icon, select from the drop-down menu and open the Configuration panel (*Pic. 6.1*).

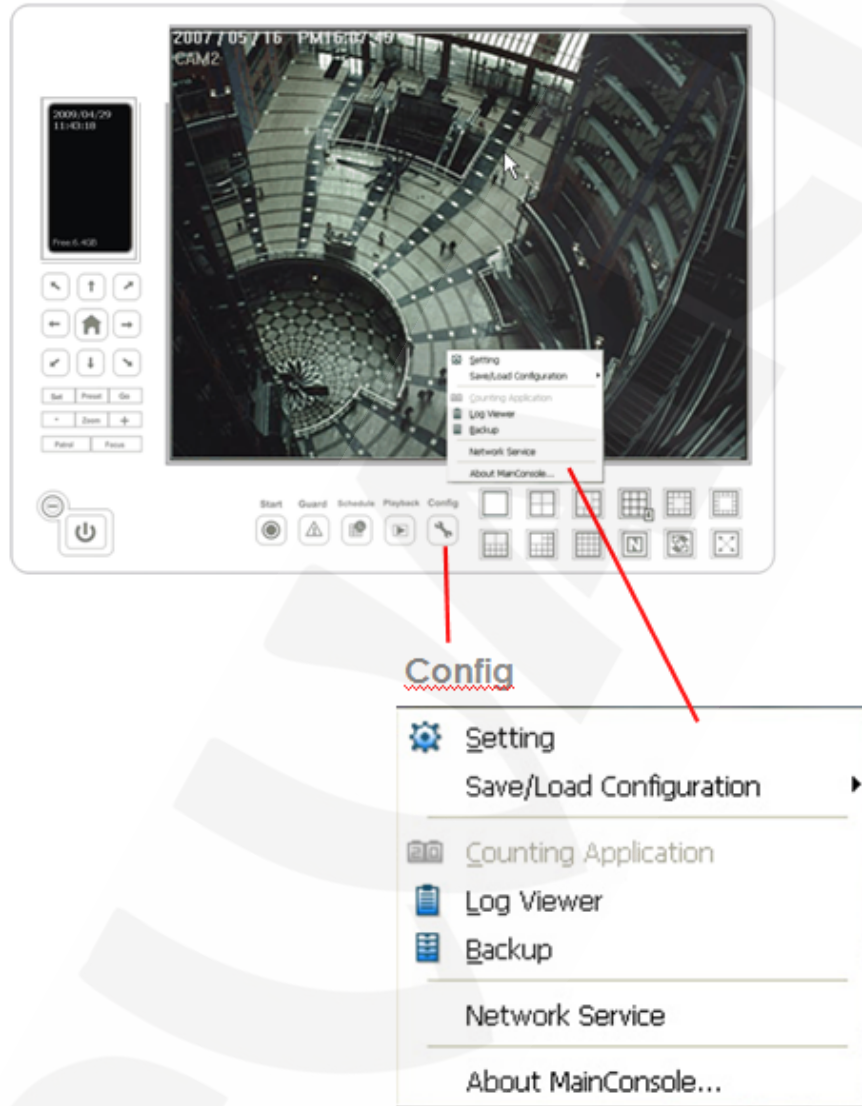

Pic. 6.1


6.1. Setting - general

Picture 6.2.

Startup: check the box and activate the functions as the system starts. You may start/stop the function in Monitor panel on the Main Console.

- **Panel Resolution:** set up the resolution of the control panel. You may select Auto Fit to have the system choose the best one for you.

 Automatically popup event report: event report dialog automatically pops up when events have been detected. Make sure to stop Smart Guard System before you modify the setting, otherwise the modification will not take place.

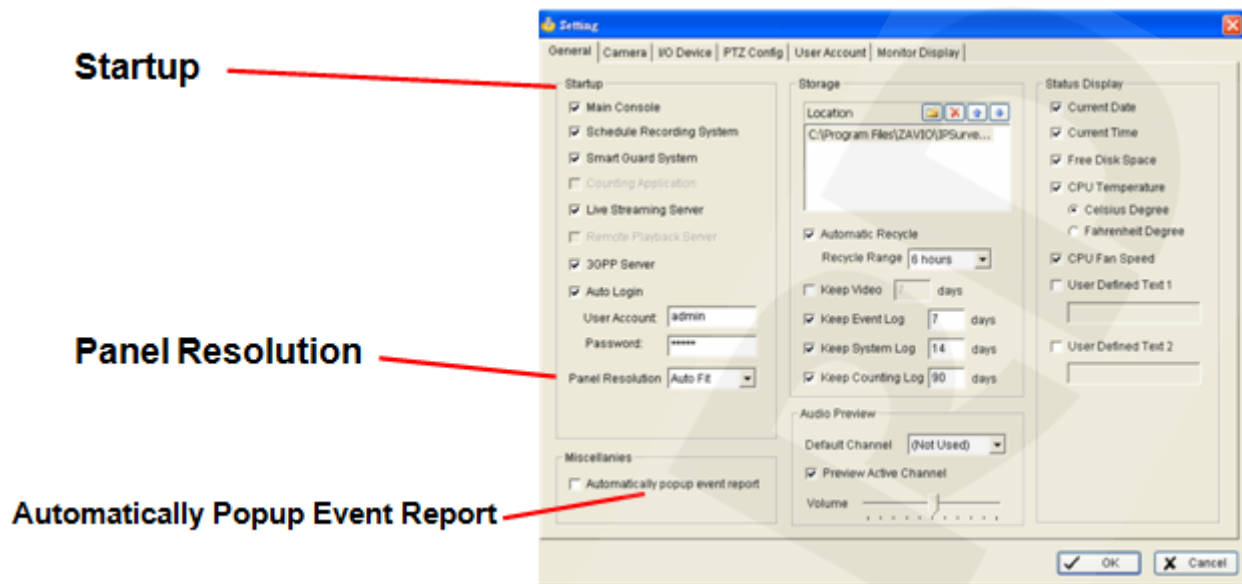

Pic. 6.2

Storage

Picture 6.3.

Location: assign the default folder for the system to store all data files.

 
Automatic recycle: the system will automatically delete outdated files to save storage space.

Keep video: delete the video records that are older than the number of days set.

Keep event log: delete the event log data that is older than the number of days set.

Keep system log: delete the system log data that is older than the number of days set.

Keep counting log: delete the counting application data that is older than the number of days set.

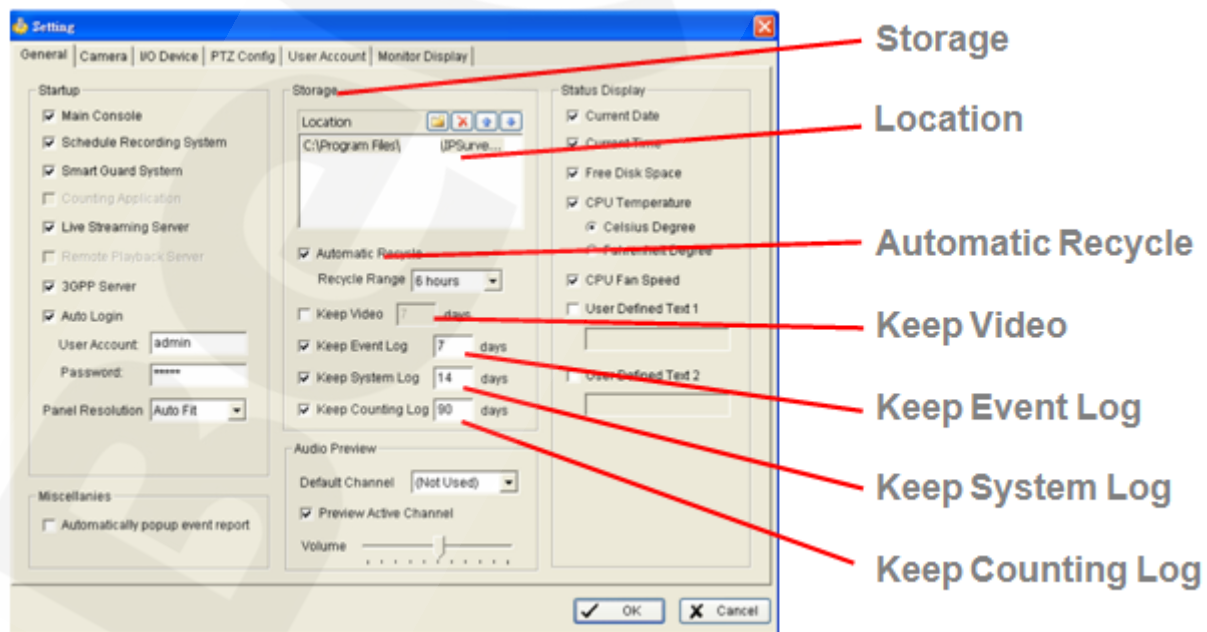


Pic. 6.3

Audio preview

Picture 6.4.

Default channel: select the audio channel that you wish to hear from in “Default Channel”.

 Preview active channel: check the “Preview Active Channel” option to hear the audio from selected video channel on Main Console. The default channel plays if the video channel isn’t selected (Pic. 6.5, 6.6).

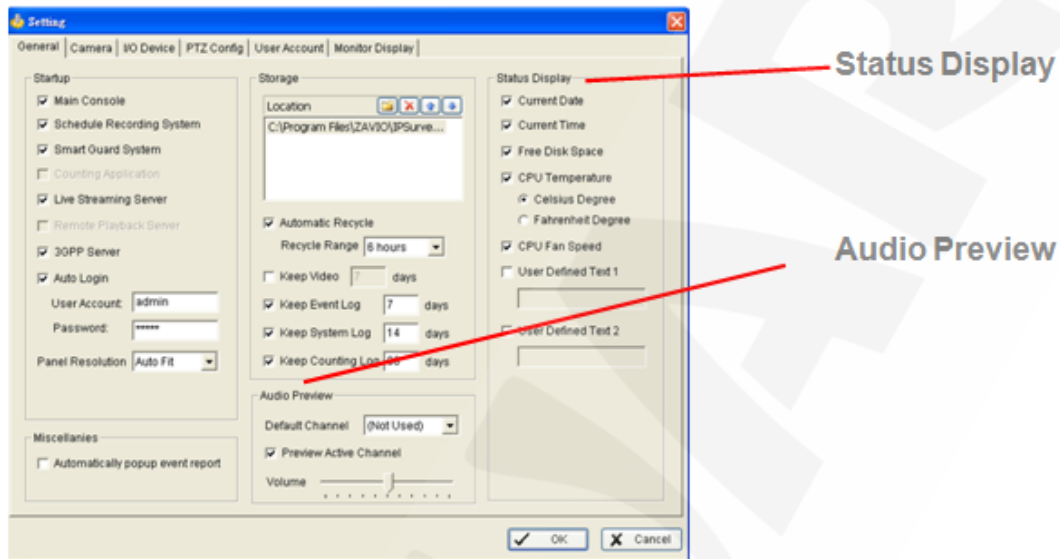


Pic. 6.4


System plays the audio of default channel (Pic. 6.5).

System plays the audio of left-top selected channel (Pic. 6.6).

 Volume: adjust the volume with the “volume bar.”

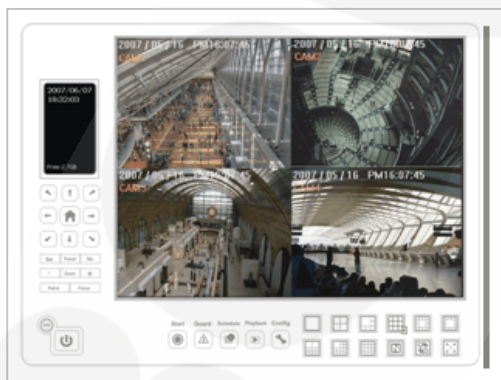


Pic. 6.5

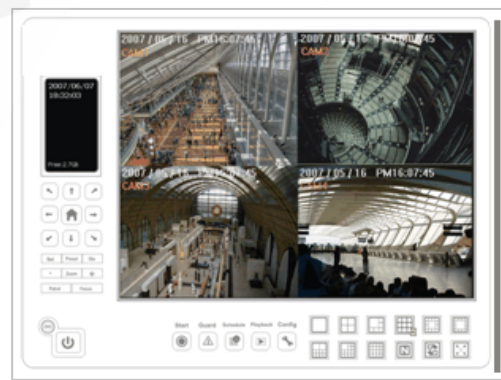 

Pic. 6.6

Status display

 
Check the boxes of the information that you wish to see in the information display window in the Main Console (*Pic. 6.7*).

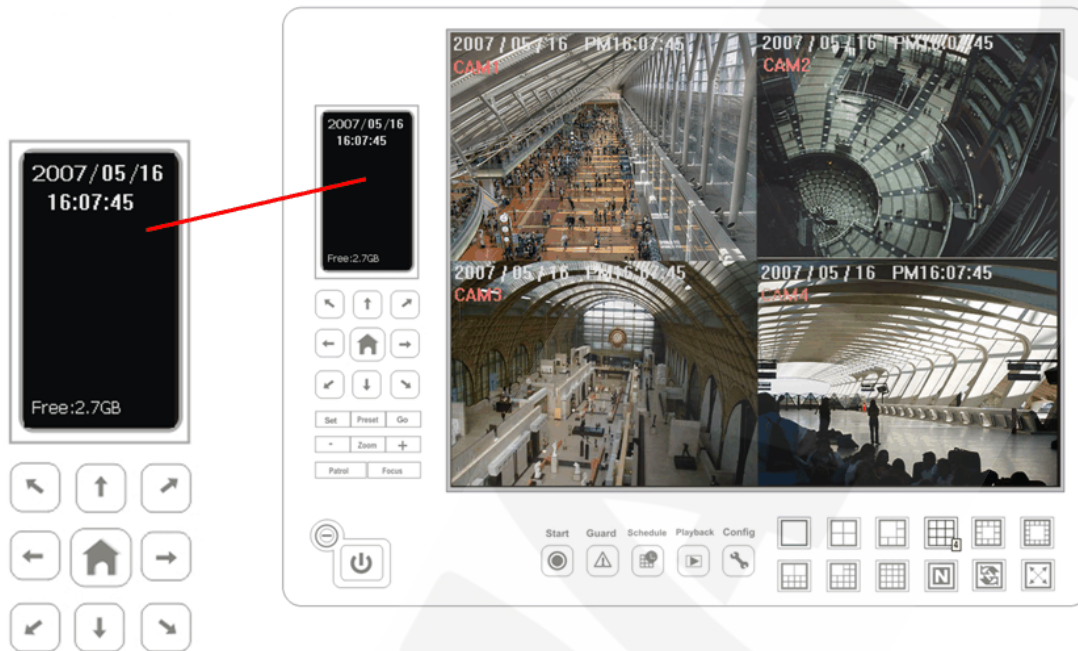

Pic. 6.7

6.2. Setting - camera

 Picture 6.8.

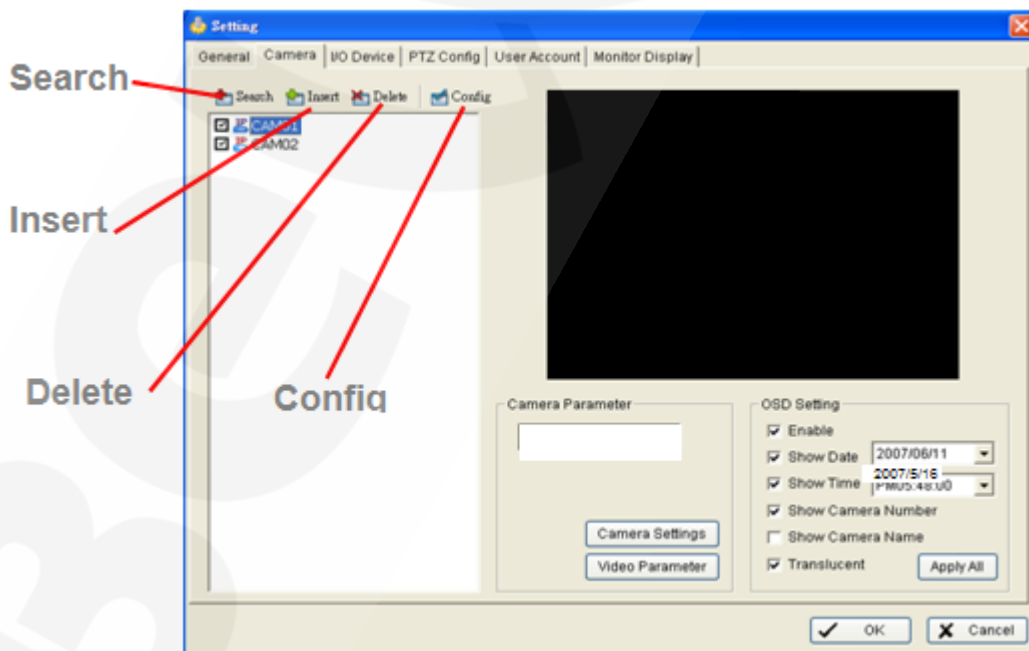

Pic. 6.8

Add camera

Four function buttons will be included in the Setting/Camera panel if you have our Hybrid Surveillance System license for IP camera.

 
Search: click on the Search icon to obtain the Search IP Camera panel. The system will start scanning automatically once the panel is opened; you can stop scanning by clicking on the Stop Scan button (*Pic. 6.9*).

Fill in the user name and password for each IP camera found and click **[OK]** to add it to the camera list.

Insert: click on the Insert icon to obtain the IP/Video Server Setting panel and add IP cameras to the list.

Delete: click on the delete button to remove the selected IP camera(s) from the system. Click **[OK]** to finalize the modification.

Config: click on the Config button to obtain the IP/Video Server Setting panel. You can modify the IP camera settings with the Setting panel.

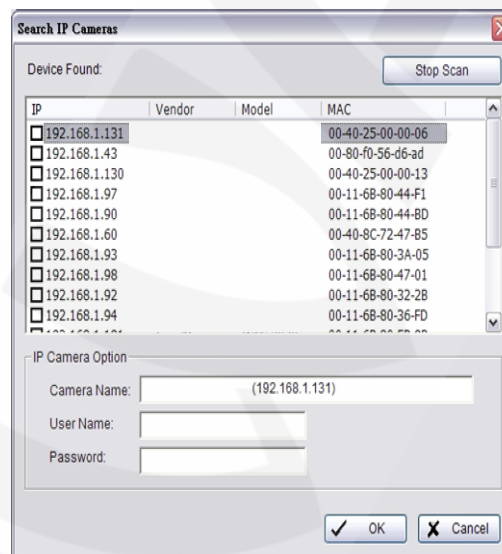

Pic. 6.9

Camera parameter


Picture 6.10.

Camera list: the camera(s) connected to the system will show on the panel, click the name of the camera to adjust the setting.


Camera name: name the camera for your convenience.

Camera settings: set the camera parameter offered by camera vendor (*Pic. 6.11*).

 Video parameter: adjusts the video brightness, contrast, saturation, and color hue values.

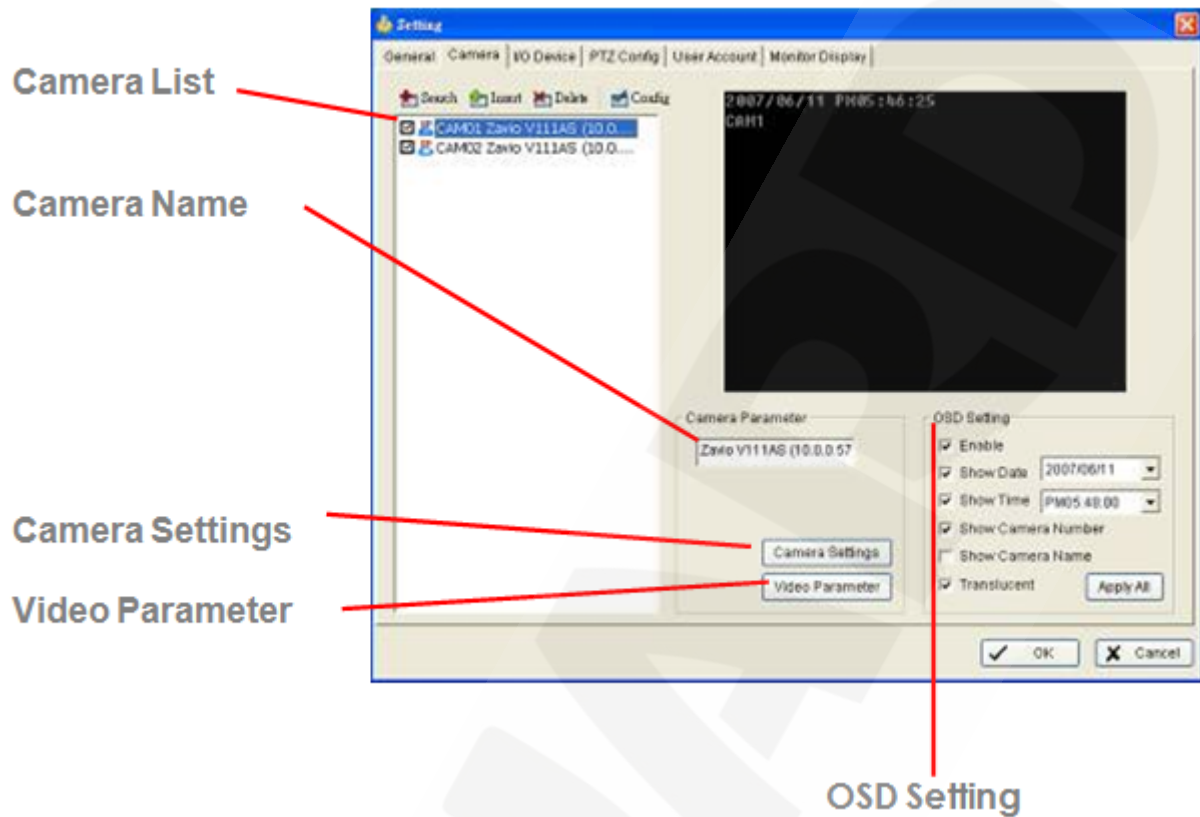

Pic. 6.10

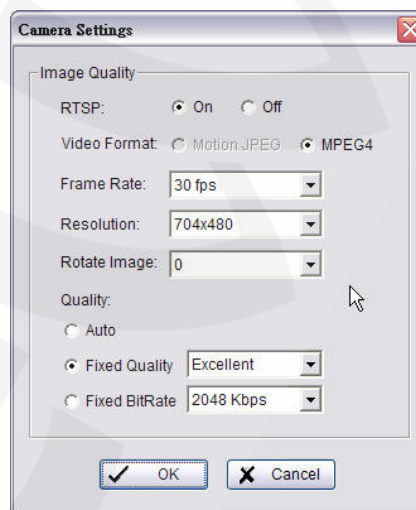 

Pic. 6.11


Camera / video server setting panel

Picture 6.12.

Network: fill up the Network field (including Name, IP Address, Http Port, User Name, Password and Protocol) referring to the instruction provided by the camera manufacturer. Check "Use DNS" to use domain name instead of IP address.

Device: choose the IP camera manufacturer from the drop-down menu. Click on “Auto Detect” and the model name will show in the box.

 Description: show information of the IP camera.

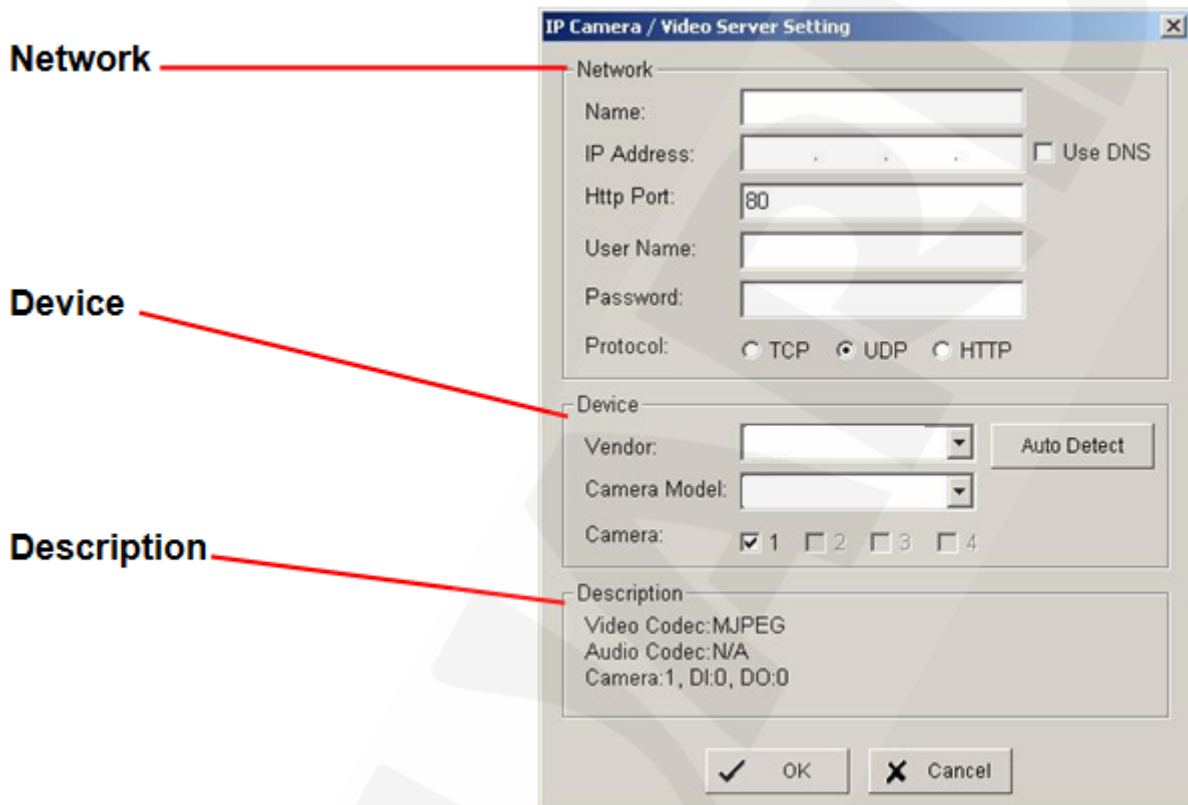

Pic. 6.12

6.3. Setting - I/O device

Picture 6.13.

Module setting: name the module device and ID that connects the digital input/output device(s) to your system.

Device: this column displays the device(s) already installed to the system.

 
ID: select the number of the I/O port to which you plug the ribbon cable.

Input monitor: the device(s) is turned on if the dot is in red. By triggering the digital input device, the related icon will light up. This is used to check if the device is correctly connected or not.

Output monitor: the device(s) is turned on if the dot is in red. By clicking on the icon, you may trigger the digital device connecting to the system. This can be used to test if the output device is correctly connected.

Device setting

- Name: insert the name of the device (input and output).
- Type: select the device type from the drop-down menu.
- N/O: normal open.
- N/C: normal close.

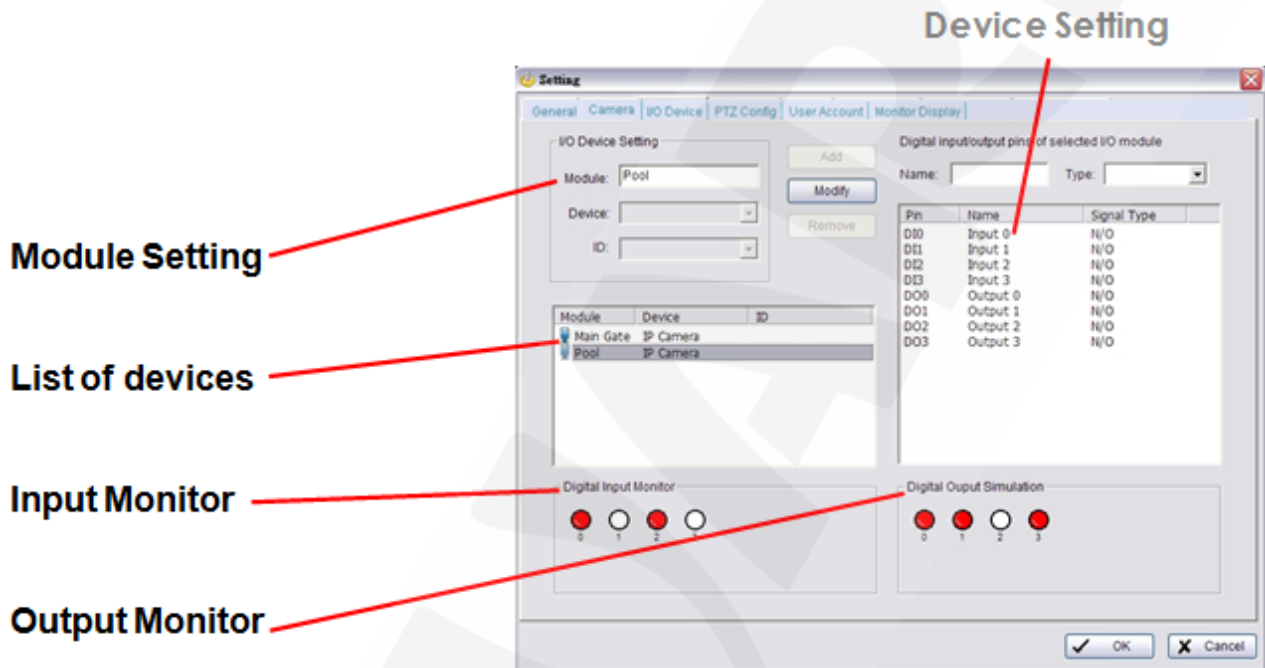

Pic. 6.13

6.4. Setting - PTZ config


Picture 6.14.

Install PTZ cameras following the instruction of the camera manufacturers. A PTZ camera is usually connected to the PC with RS-485/RS-422.

Check the box on the camera list to activate the PTZ control function of a PTZ camera.

Basic setting: select the camera model, com port, baud rate, and address according to your PTZ camera.

 
Advanced setting: you may setup the pan speed, tilt speed, zoom speed and auto pan speed. Adjust the settings by dragging the bars.

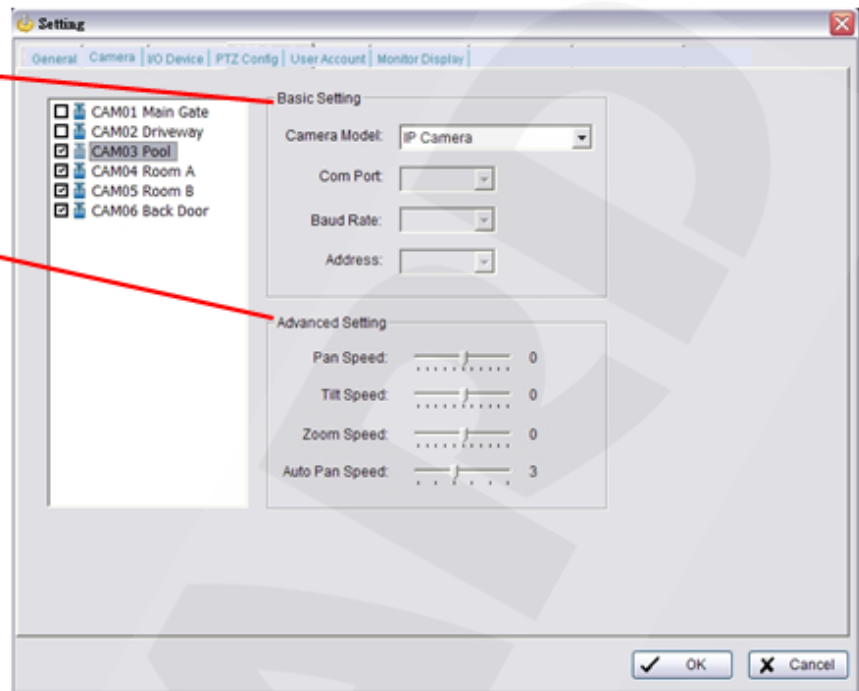Basic Setting**Advanced Setting**

Pic. 6.14

6.5. Setting - user account

 User Account: the administrator may manage the user accounts here (Pic. 6.15). From the list on the right, highlight each account and modify the privilege setting.

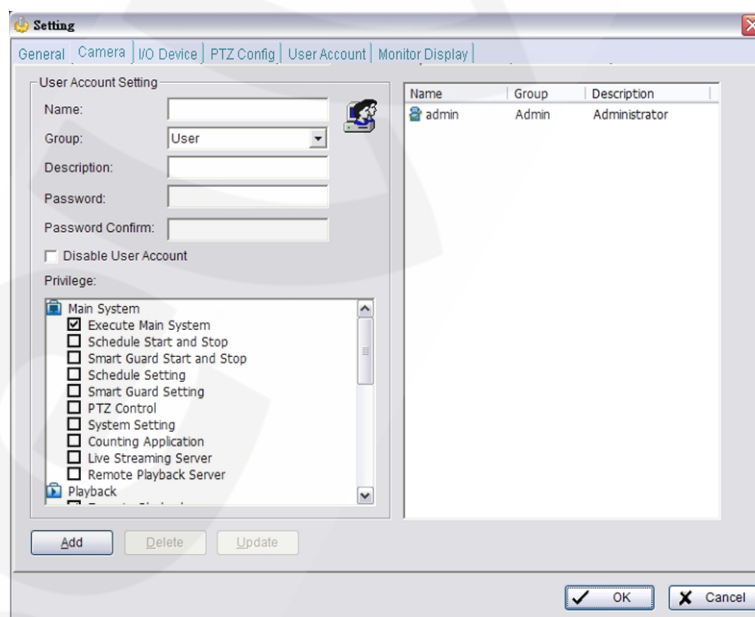

Pic. 6.15

6.6. Setting - monitor display

Picture 6.16.

 
Playback option: execute Playback on the secondary monitor by checking the box. Make sure to adjust the display setting of your computer in advance to avoid system errors.

Cameras list: the left side displays a list of all cameras; modify the cameras shown on primary/ secondary monitor in the right window.

Auto scan: activate auto scan to rotate the channels/ cameras on the display screen.

For instance, you may select to show only 4 sub-screens on the main console while having 16 channels connected to the system. With auto scan function, you will be able to see all 16 channels by turns. You can set up a primary channel that will always be on the screen and a secondary channel that has secondary priority.

Layout: choose the number of divisions for NxN division on the Main Console screen.

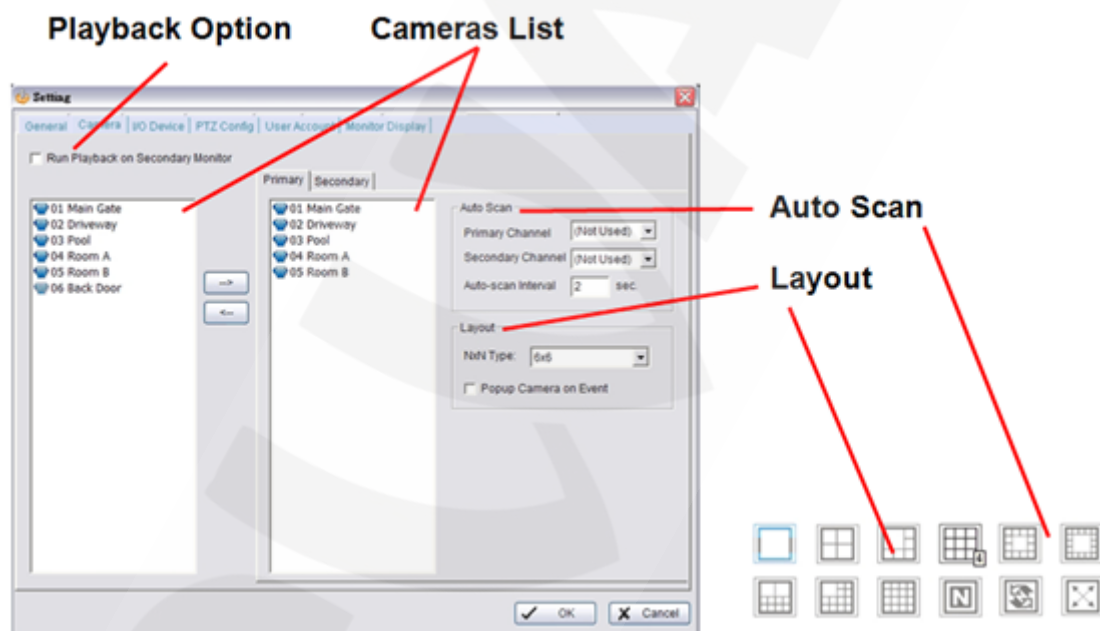

Pic. 6.16

6.7. Save/ load configuration


Picture 6.17.

The Save/ load configuration function allows system users to save any specific setting as a cfg (config) file. You may save up several different cfg files at any time.

Save configuration: to save a specific setting, go to Config > Save/ Load Configuration > Save. In the popup window, type in the file name and then save it as a cfg file.

Load configuration: to load a specific setting, go to Config > Save/ Load Configuration > Load. In the popup window, go to the directory that you saved the cfg files at, select any one of

 them and then click **[OK]** to load the file. Main Console will automatically shut down after loading a new configuration. Please re-start Main Console manually.

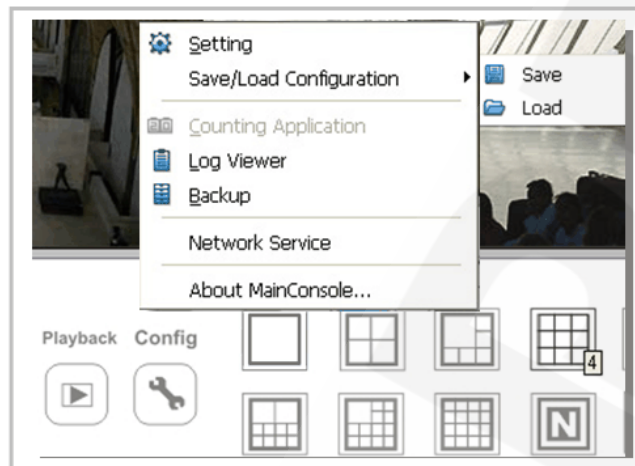

Pic. 6.17

NOTE!

Main Console will be automatically shut down after loading a new configuration. Please re-start Main Console manually.

6.8. Log viewer

6.8.1. Log viewer - unusual event

Unusual event: view the history of unusual event that had been detected by the Smart Guard System. *Picture 6.18.*

Step1: choose the type of event you want to check or select "All" from the drop-down menu for all types of events.

 
Step 2: select the camera you want to check the event(s) from or select "All" for all available channels.

Step 3: you may view events happened on a particular date or during a given time period. To search and view unusual event happened on a particular date, mark the box right next to "Date" and indicate the date.

You may also point out two different time points and search for unusual events happened during the period. Mark the box in the Date & Time column and then enter the date and time.

Step 4: click **[Search]**.

Step 4

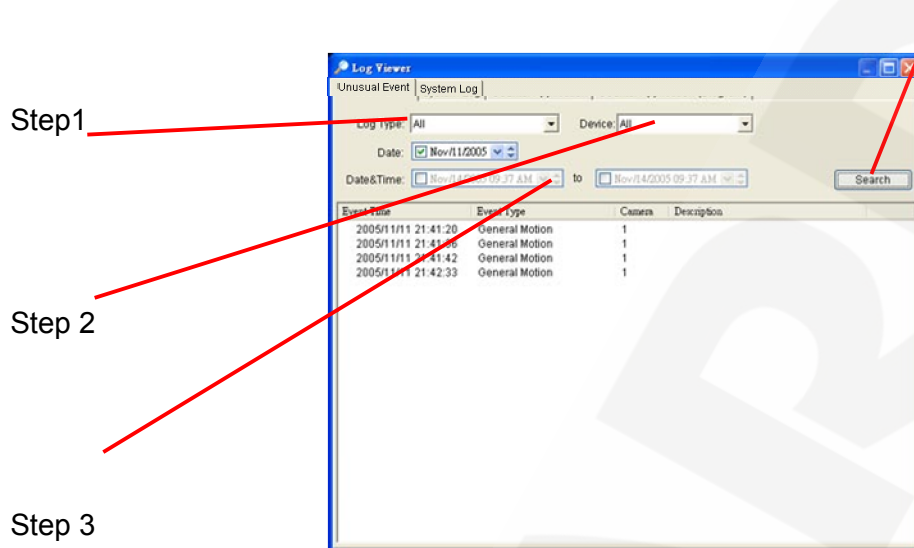

Pic. 6.18

6.8.2. Log viewer - system log

System log: you can choose the log type from the drop-down menu, following is a complete list of all log types:


- | | |
|--------------------------|-----------------------------------|
| 1. Main Console Startup | 12. Stop Smart Guard |
| 2. Main Console Shutdown | 13. Modify Smart Guard |
| 3. User Login | 14. Modify Schedule |
| 4. User Login Failed | 15. Modify Configuration |
| 5. Start Schedule | 16. Start Live Streaming Server |
| 6. Stop Schedule | 17. Stop Live Streaming Server |
| 7. Execute Recycle | 18. Modify Live Streaming Server |
| 8. Execute Backup | 19. Start Remote Playback Server |
| 9. Enable Channel | 20. Stop Remote Playback Server |
| 10. Disable Channel | 21. Modify Remote Playback Server |
| 11. Start Smart Guard | 22. IP Camera Connection Lost |

Step1: choose the type of event you want to check or select "All" from the drop-down menu for all types of events (Pic. 6.19).

Step 2: you may view events happened on a particular date or during a given time period. To search and view unusual event happened on a particular date, mark the box right next to "Date" and indicate the date. You may also point out two different time points and search for unusual

events happened during the period. Mark the box in the Date&Time column and then enter the date and time (Pic. 6.19).

 Step 3: click [Search] (Pic. 6.19).

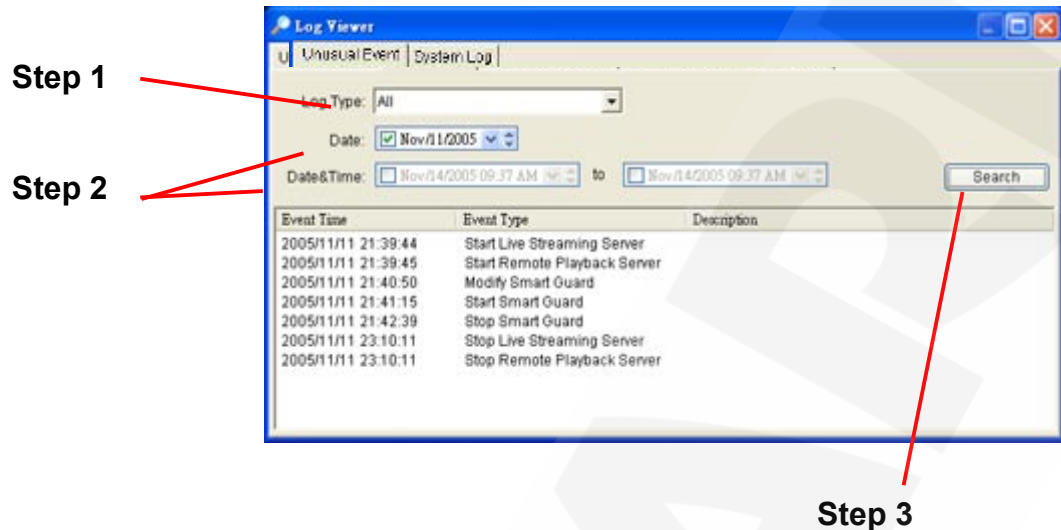


Pic. 6.19

6.9. Backup

6.9.1 Backup


The backup function saves video record and other log information. User may open backup files on any PC with Windows Operation System and operate the full function Playback panel on it. Follow the instructions below to obtain backup files.

 Step 1: click on "New Period" to obtain the Select Date Time Period panel (Pic. 6.20).

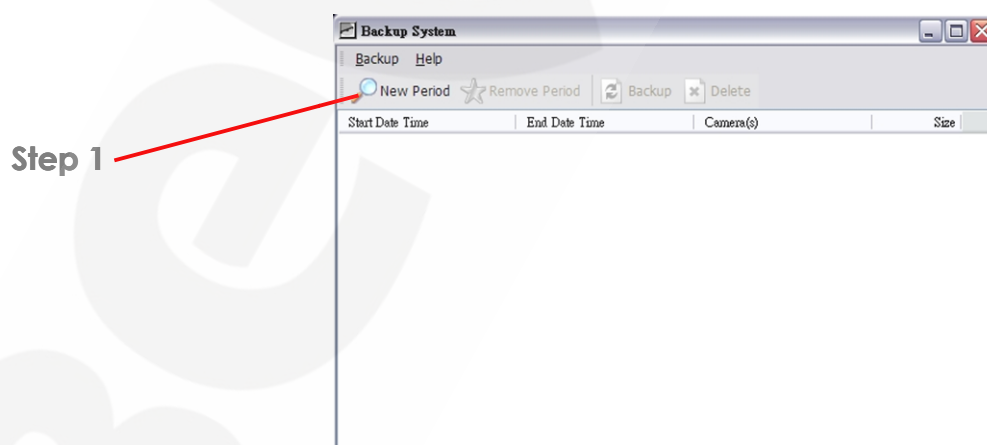

Pic. 6.20

 Step 2: from the record date section, select the date you want to backup from. You will see color lines appear in the time table implying available data recorded. Red, green, and blue stands for record always, record on motion, and record on event data files, respectively (*Pic. 6.21*).

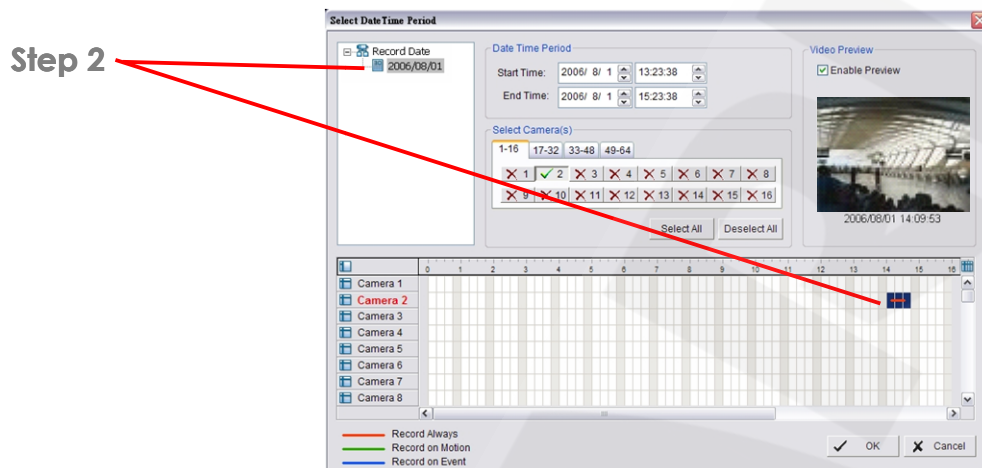


Pic. 6.20

Step 3: select the data you want to backup by highlighting the time period. Besides the time-table, you may also set up start time and end time in the Date Time Period section (*Pic. 6.21*).

Step 4: click on the camera number icon to add camera(s) or click **[Select All]** to add all the cameras (*Pic. 6.21*).


Step 5: check the box of Enable Preview to get the preview of the video you select (*Pic. 6.21*).

 Step 6: click **[OK]** when the settings are completed and go back to the Backup panel (*Pic. 6.21*).

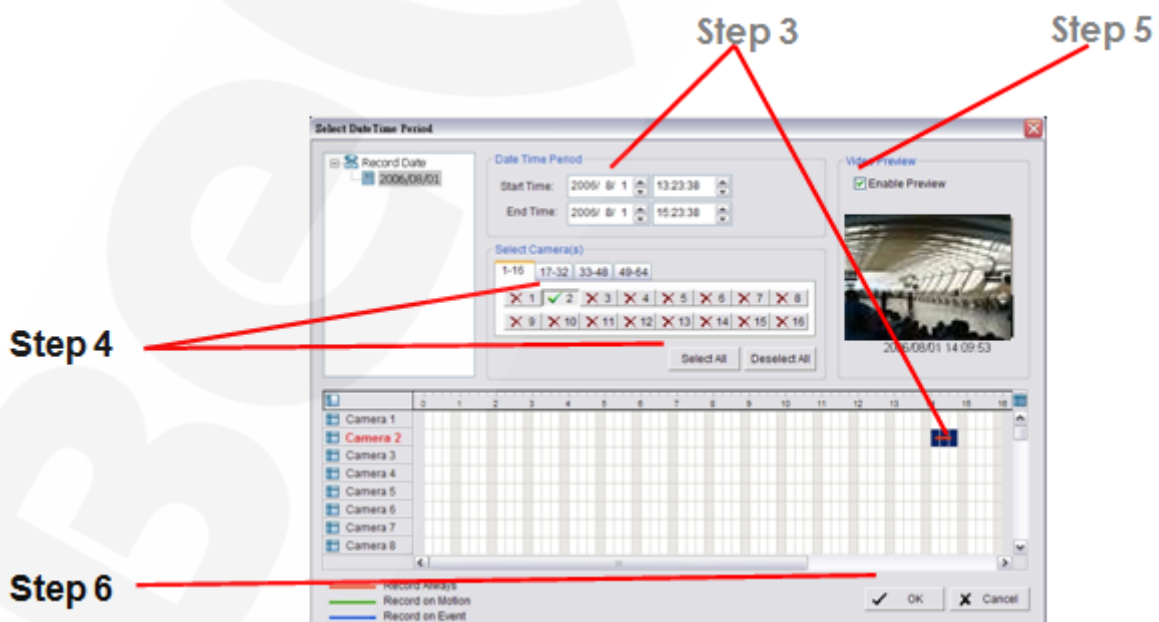

Pic. 6.21

 
Step 7: click the Backup icon to see the size of the file (Pic. 6.22, 6.23).

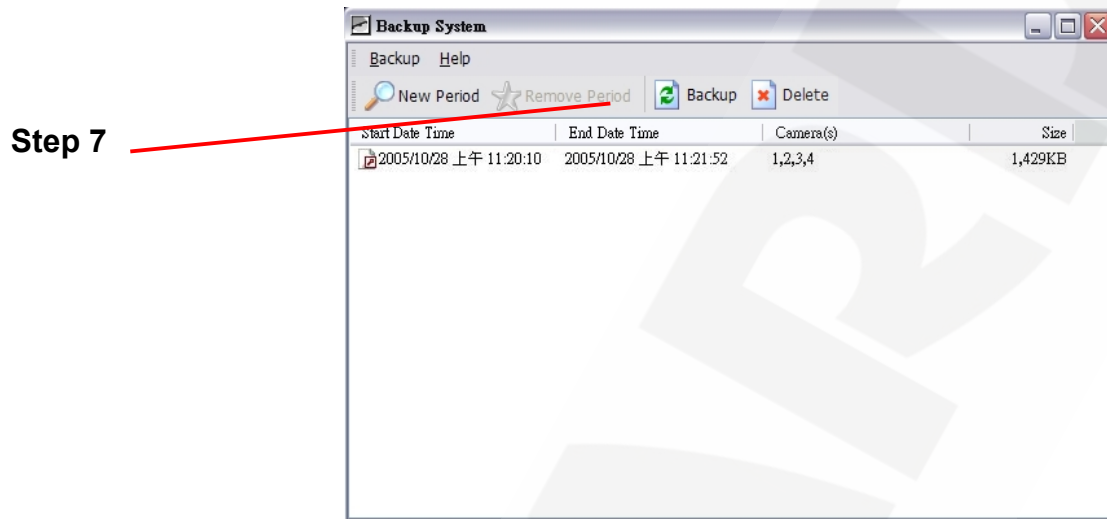

Pic. 6.22

Step 8: choose the path you want to save the file or burn the file into a CD (direct CD burning available in Windows XP or later versions) (Pic. 6.23).

 
Step 9: select the log information you would like to backup (Event Log, System Log and/or Counter Log) and then click [OK] (Pic. 6.23).

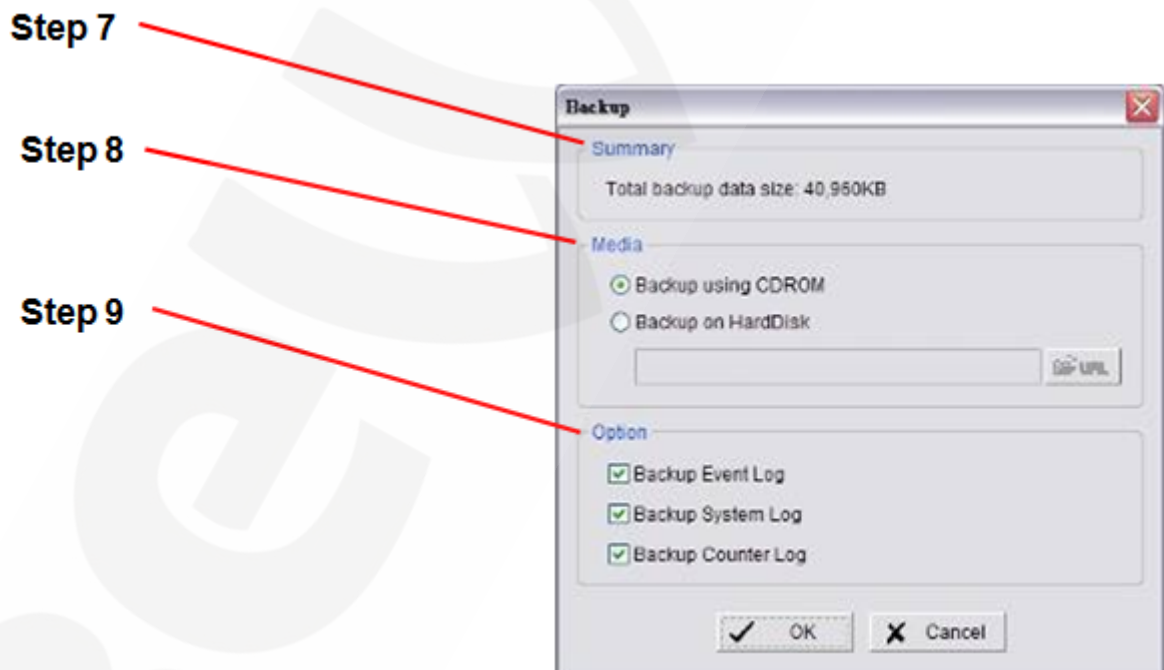

Pic. 6.23

6.9.2. Delete recorded information from the system

 
Step 1: click on “New Period” to obtain the Select Date Time Period panel (Pic. 6.24).

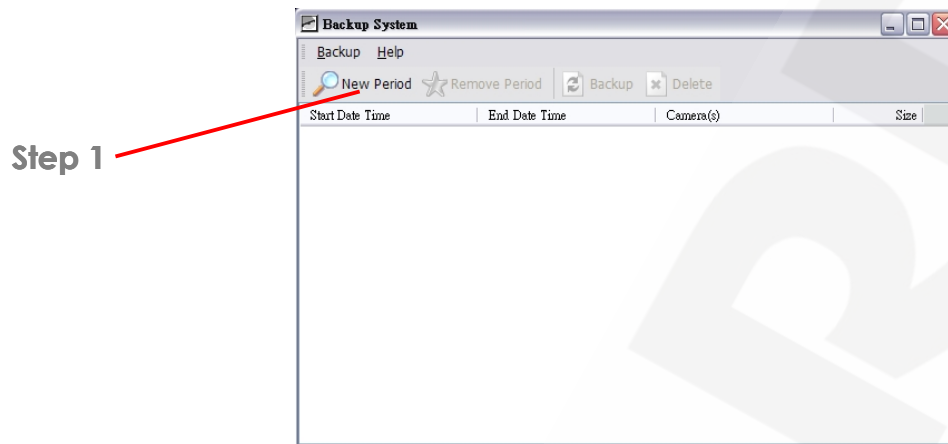

Pic. 6.24

Step 2: from the record date section, select the date you want to delete the file from. You will see color lines appear in the time table implying available data. Red, green, and blue stands for record always, record on motion, and record on event data files, respectively (Pic. 6.25).

 Step 3: select the data you want to delete by highlighting the time period. Besides the time-table, you may also set up start time and end time in the Date Time Period section (Pic. 6.25).

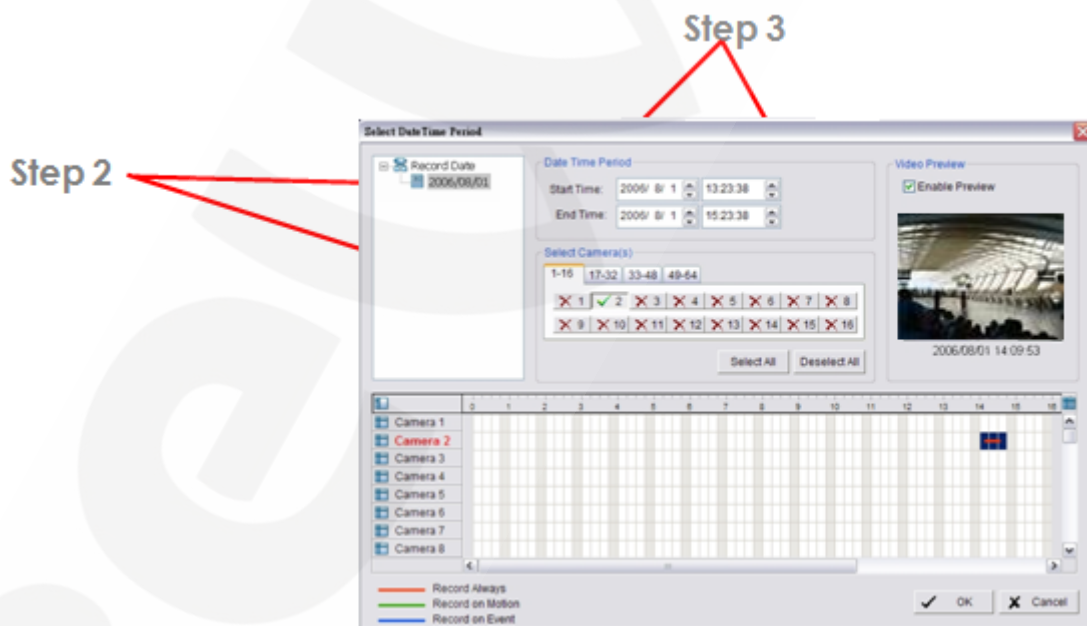


Pic. 6.25

Step 4: click on the camera number icon to add camera(s) or click Select All to add all the cameras (Pic. 6.26).

Step 5: check the box of Enable Preview to get the preview of the video you select (Pic. 6.26).

 Step 6: click **[OK]** when the settings are completed and go back to the Backup panel (Pic. 6.26).

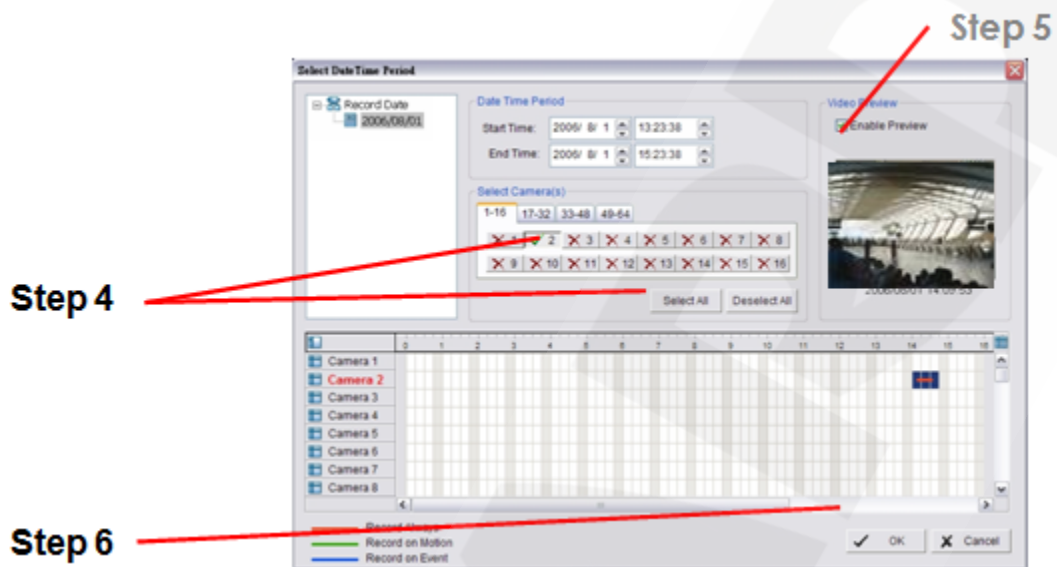


Pic. 6.26

Step 7: click on the “Delete” icon and delete the data (Pic. 6.27).

NOTE!

 
The deleted video cannot be recovered.

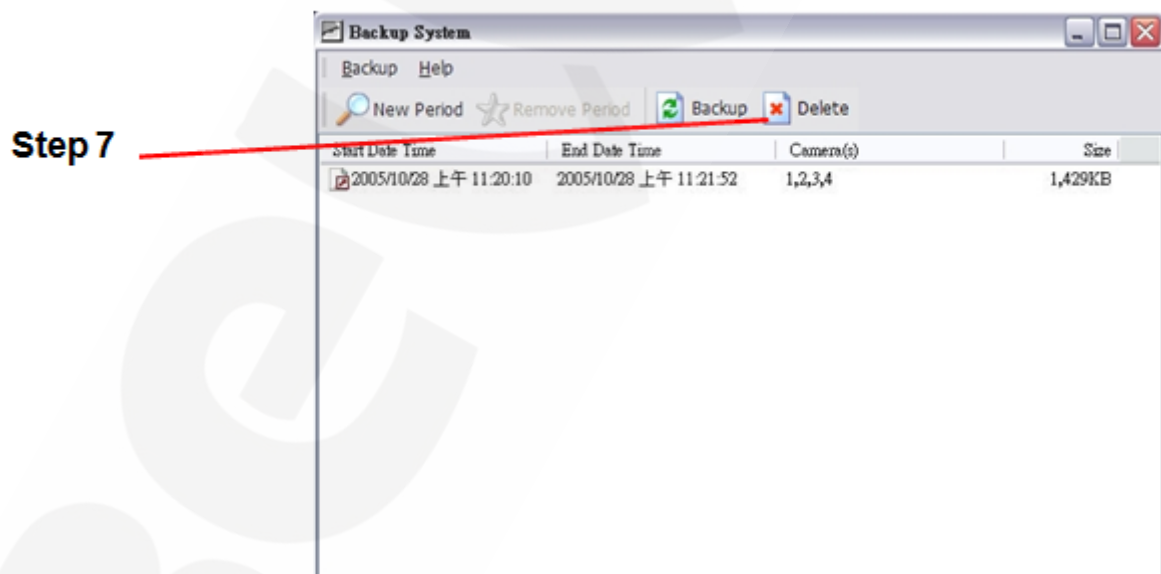

Pic. 6.27

6.10. Network service

 There are 5 types of network services: live streaming server, remote playback server, 3GPP service, Remote Desktop, and Central Management Service. From the Main Console, go to Config > Network Service to obtain the Network Service panel (Pic. 6.28).

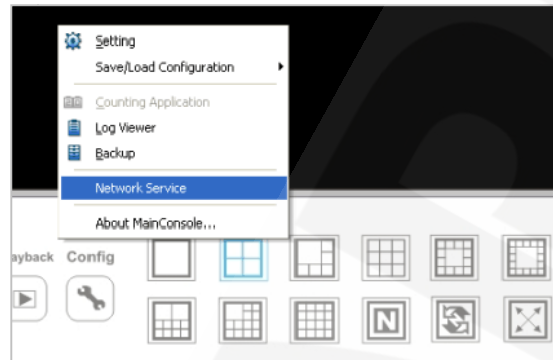

Pic. 6.28

6.10.1. Live Streaming Server

When starting the live streaming function of your computer, you allow remote users to log on to the specific computer and view cameras that are connected to it. As system administrator, you are able to monitor these accounts in order to maintain the system efficiency. *Picture 6.29.*

Main

On Live Streaming Server panel, you can see the clients who are currently logging on to your computer and watching the live video from the remote side.

Start: by starting the system, you turn the computer into a live streaming server; thus allow remote users to log on to the system.

Kill client: highlight an IP address and click on the “Kill Client” button to block a client from your system.

Kill all clients: by clicking this button, you may block all the clients logging to your system.

Stop: stop broadcasting live stream video.

 
Options: you may only adjust the setting when the server is stopped.

Port: assign a port for the clients to connect to your system to the network.

Maximum connections: number of connections that are allowed to connect to your system. Default is 16 channels and maximum is 128, one camera video counts as one connection.

Use default web server: activate the Web server by checking the box; clients will be able to watch live video via Internet Explorer. The port for live streaming server is set to 80 by default. (*must check this item for system access via IE)

Save log: save the log information at appoint folder.

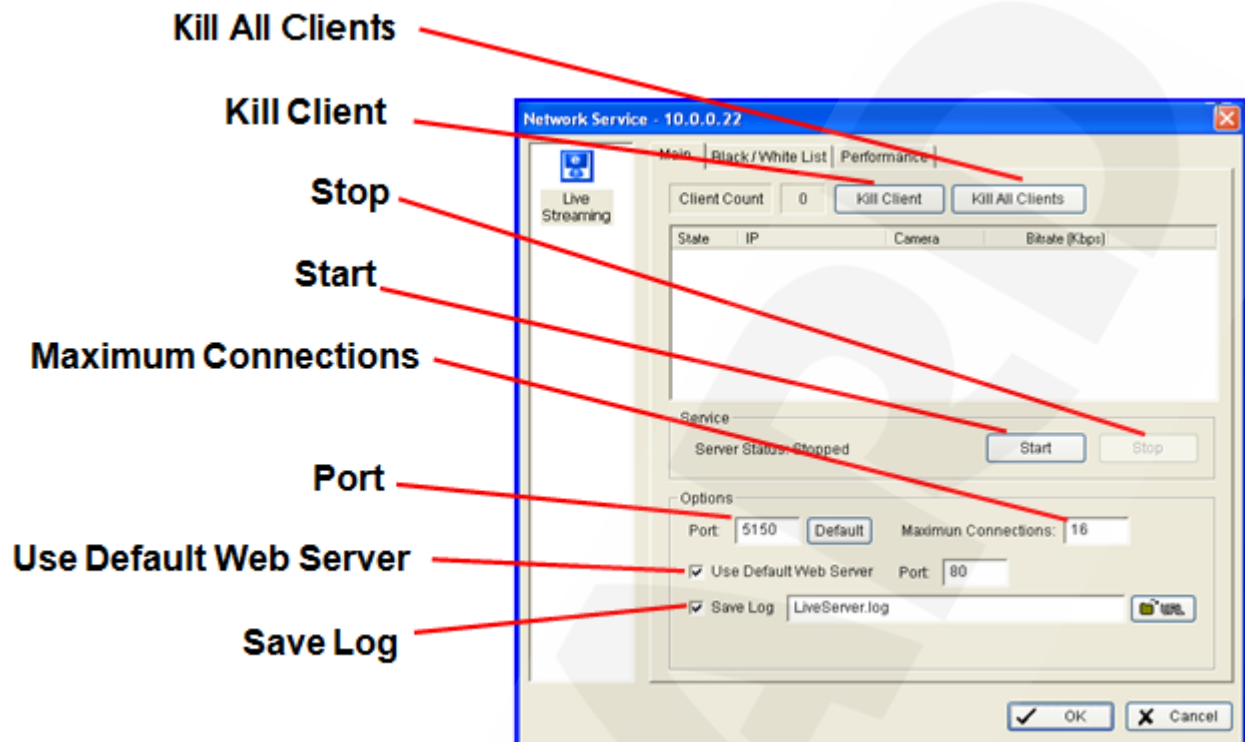

Pic. 6.29

Black/ white list*Picture 6.30.*

 
White list: check the “Enable White List” box to activate the white list filter. Only IP from the white list is allowed to log in.

Black list: check the “Enable Black List” box to activate the black list filter. IP from the black list will be blocked.

IP Address: enter an IP address into the IP address field on the left. To add an IP address range to the system, enter 2 sets of IP address to indicate a series of IPs.

Add/delete: to Add the IP(s) onto the list or remove it from the list.

Apply to all playback servers: to apply the setting to both live streaming server and remote playback server.

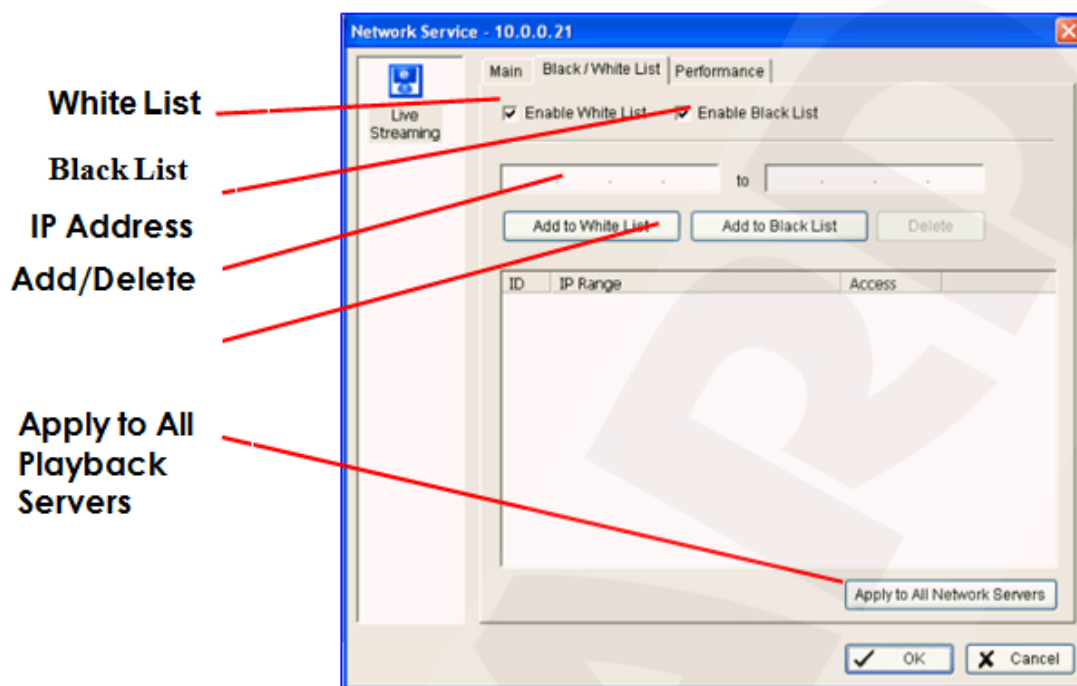


Pic. 6.30

Performance

Picture 6.31.

Total bit rate

 Individual Camera bit rate

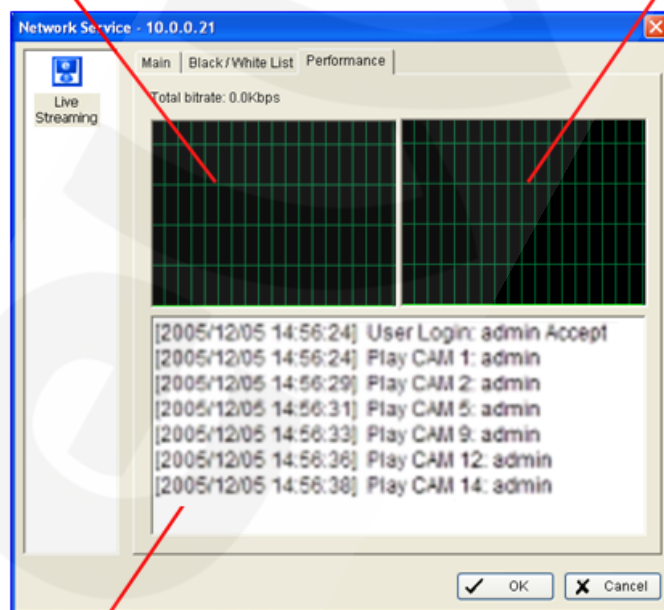

Live Streaming Server log information

Pic. 6.31.

6.10.2. Remote playback server

When starting the remote playback function of your computer, you allow remote users to log on to the specific computer and withdraw data files that are stored on it. As system administrator, you are able to monitor the accounts that log on in order to maintain the system efficiency.

Main

Picture 6.32.

On Remote Playback Server panel, you can see the clients who are currently logging on to your computer and watching the live video from the remote side.

Start: by starting the system, you turn the computer into a remote playback server; thus allow remote users to access the system.

Kill client: highlight an IP address and click on the “Kill Client” button to block a client from your system.

 
Kill all clients: by clicking this button, you may block all the clients logging to your system.

Stop: stop broadcasting playback video.

Kill Client

Kill All Clients

Start

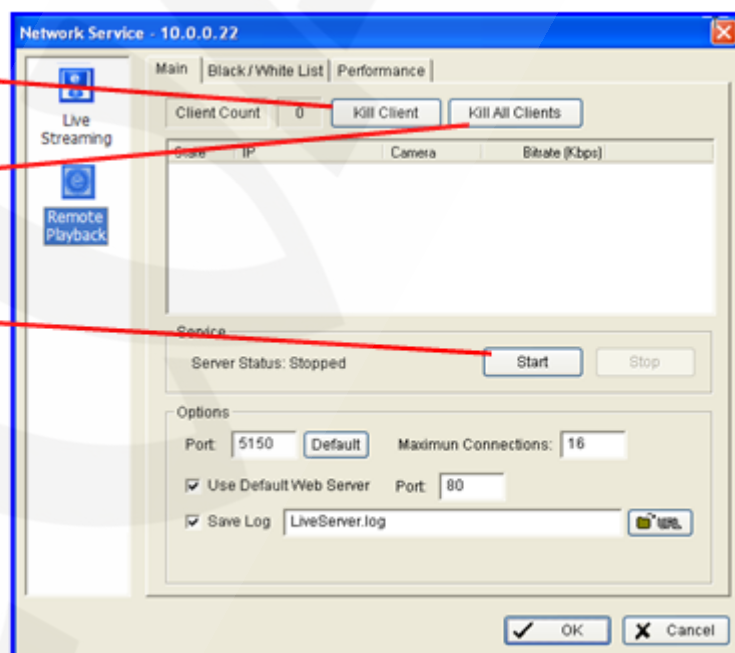


Pic. 6.32

Options: you may only adjust the setting when the server is stopped (Pic. 6.33).

Port: assign a port for the remote playback server to connect to your system to the network.

Maximum connections: number of connections that are allowed to connect to the Remote Playback Server. Default is 8 accounts and maximum is 64, one account counts as one connection.

 Save log: save the log information at appoint folder.

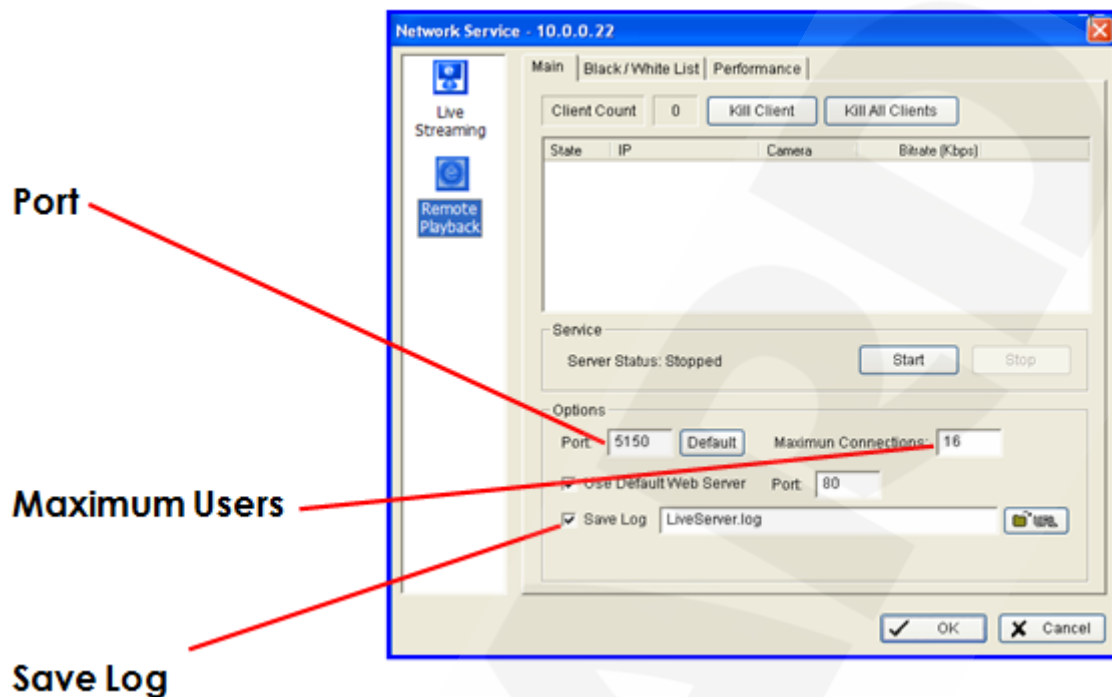

Pic. 6.33

Black/ white list*Picture 6.34.*

 
White list: check the “Enable White List” box to activate the white list filter. Only IP from the white list is allowed to log in.

Black list: check the “Enable Black List” box to activate the black list filter. IP from the black list will be blocked.

IP address: enter an IP address into the IP field on the left. To add an IP range to the system, enter 2 sets of IP to indicate a series of IPs.

Add/delete: to Add the IP(s) onto the list or remove it from the list.

[Apply to all playback servers]: to apply the setting to both live streaming server and remote playback server.

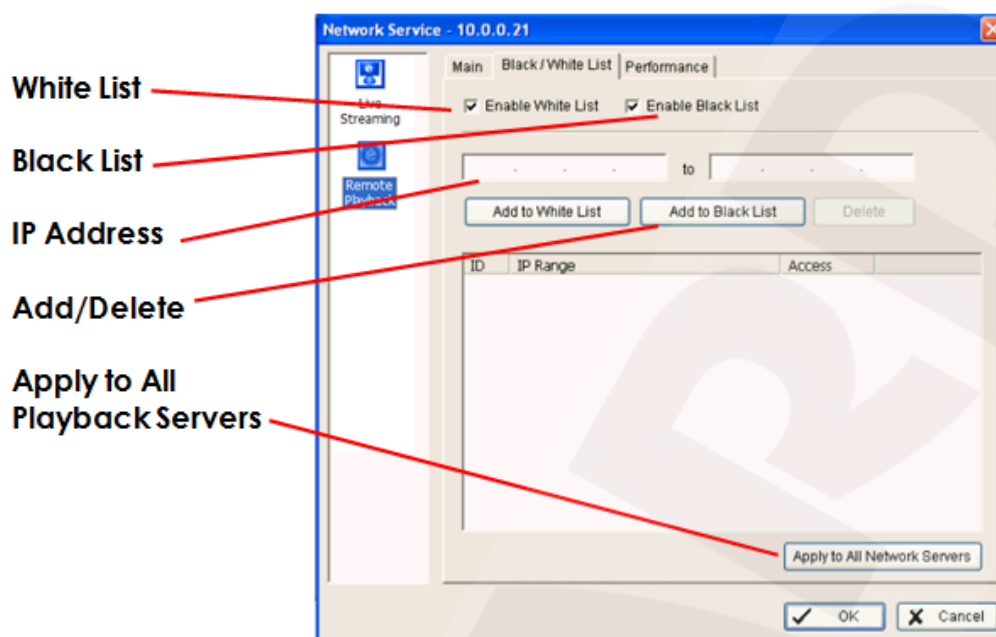


Pic. 6.34

Performance

Picture 6.35.

Total bit rate

 Individual Camera bit rate

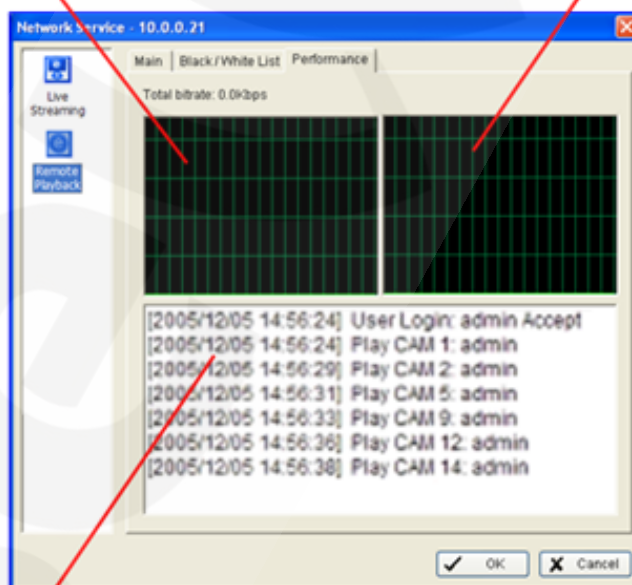


Live Streaming Server log information

Pic. 6.35

6.11. About main console

 Go to About Main Console to view the version of your surveillance system and the hardware information (*Pic.6.36, Pic. 6.37*).

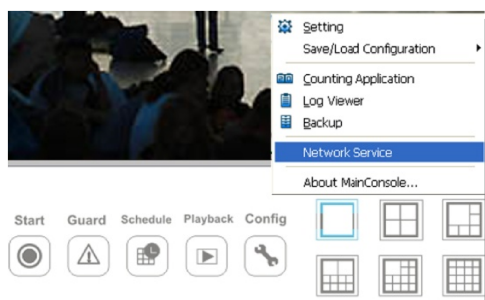


Pic. 6.36



Pic. 6.37

Chapter 7. Remote live viewer

 With the Remote Live Viewer console, remote users may watch real-time video from remote live streaming servers. *Picture 7.1.*

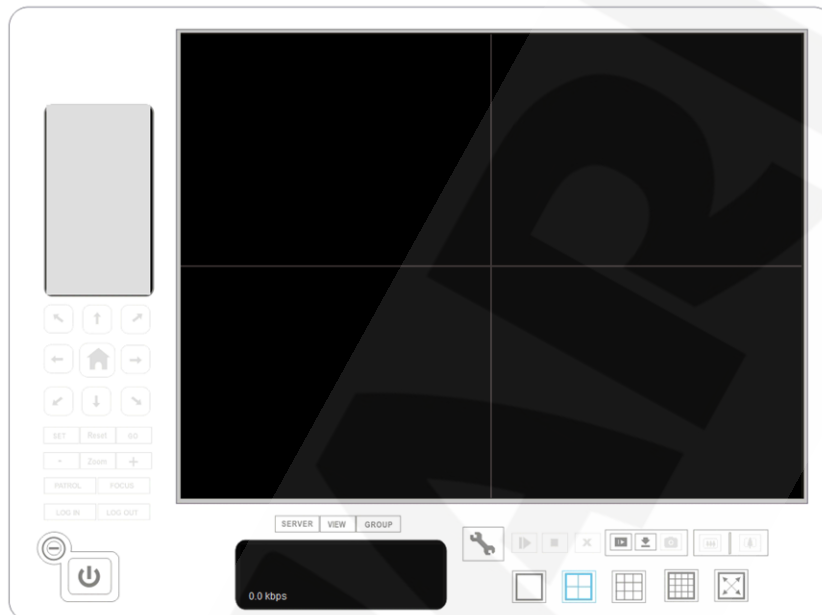

Pic. 7.1

7.1. Setup panel

Picture 7.2.



Pic. 7.2

7.1.1. Server

The Server Setting (*Pic. 7.3*):

 
Step 1: enter the Server Name which you want to use.

Step 2: enter the Address, Port, User Name, Password which you want to use to log in server.

Step 3: enable the Save Password if you do not want to enter the password again when login. Also can enable Auto Login option to auto login when start the Remote Live Viewer.

Step 4: click on Test Server to check the server setting is available.

Step 5: click add to insert the setting to server list.

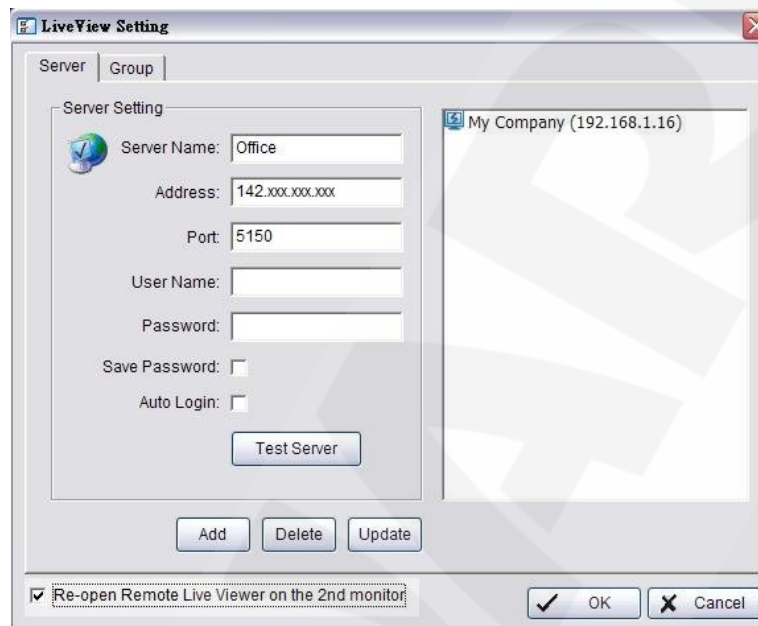

Pic. 7.3

Step 6: select a server from right server list, change the setting on light panel and click **[Update]** to modify setting or click **[Delete]** to remove the server form server list after selecting one server.

NOTE!

If you want to Re-open the Remote Live Viewer on the secondary monitor, please enable the Re-open Remote Live Viewer on 2nd Monitor.

7.1.2. Group

You may put different cameras into the same group (Pic. 7.4).

Step 1: go to the Group tab of the LiveView Setting panel.

Step 2: log in to all the servers that contain the camera(s) you would like to put into the group(s).

 
Step 3: click **[Insert]** to create a new group; name the group for future reference.

Step 4: from the window at the right, highlight the camera(s) that you would like to add to a group and then click the "<--" button. Repeat the process to complete the group setting.

Step 5: click the **[Delete]** and Rename button to remove or rename a specific group.

Step 6: repeat Step 3 to 5 until you are done with creating and setting groups.

Step 7: click [OK].

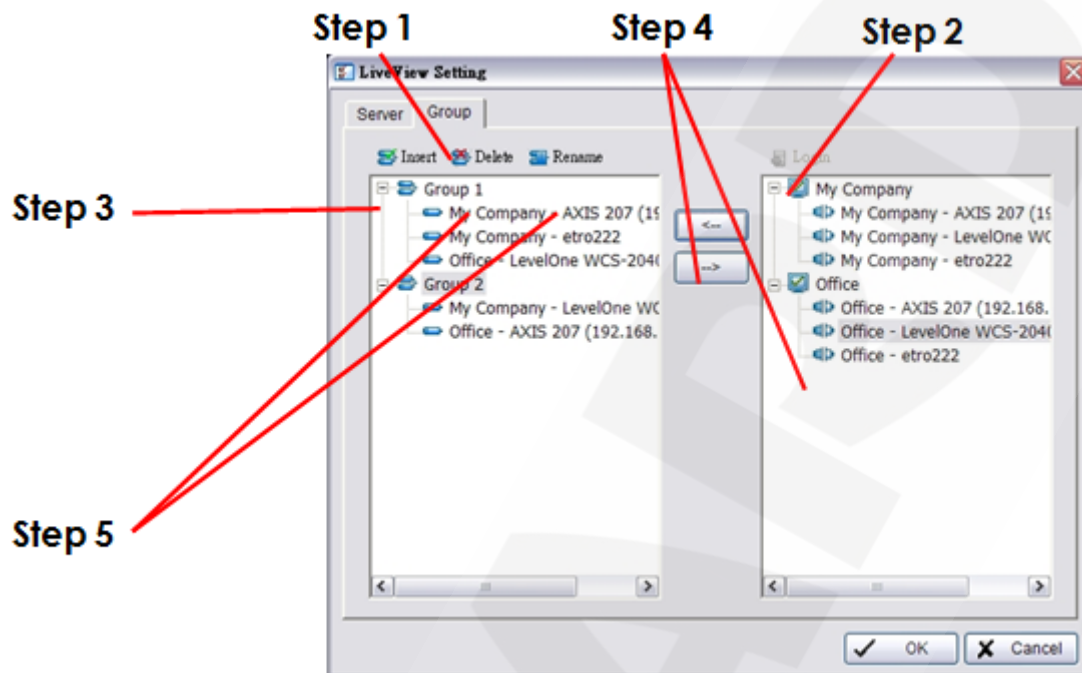

Pic. 7.4

 
7.1.3. Setup cameras OSD

You may adjust font style on this panel (Pic. 7.5).

Step 1: enable camera OSD option.

Step 2: select the font, font size, font color and any font effects desired.

Step 3: select the information that you wish to see in the sub-screen of the camera.

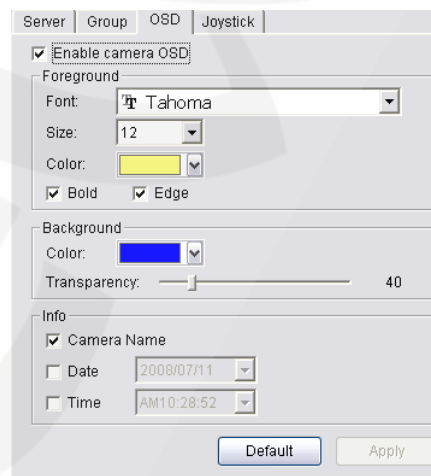

Pic. 7.5

7.1.4. Setup remote joystick control

Switch to Joystick tab and the configuration is the same as on Main console.

NOTE!

The difference of Main Console is that the action of Goto camera option in Remote Live View is going to view of layout.

Following is a complete list of all log types.

7.2. Show camera(s) on the display screen

Select a camera(s) from the server/ camera list on the right and then drag it to where you want the image to be displayed (*Pic. 7.6*).



Pic. 7.6

On the server/ camera list, click right mouse button on a camera to connect/ disconnect it.

Picture 7.7.

Log In/ log out: select a server or a group and click on the log in/ out icon to access/ leave the server. You may also log in/ out from the server by clicking right mouse button on it.

Server and camera list: display a complete list of the server(s) and camera(s) that are added to the system.

PTZ camera control: you may control the camera view by utilizing the PTZ camera control panel to adjust the camera's view. This is only available with cameras that support PTZ function.

Minimize: minimize the Remote Live View Console window.



Exit: shut down the system or log out current user.

Digital zoom: click on the **[+]** and **[-]** signs to zoom in and out the view.

 
Play / Stop/ Drop: select a camera/ video and click on this button to play/stop/disconnect a particular channel.

Information display window: display video information including server name, video current status, and bit rate for a selected channel.


Playback: view playback video remotely.

Remote I/O: user can remotely adjust the Output Pins by turning it on or off (click on Status to turn  on or  off) (Pic. 7.7, 7.8).

Snapshot: select the snapshot function to capture a specific video image immediately.

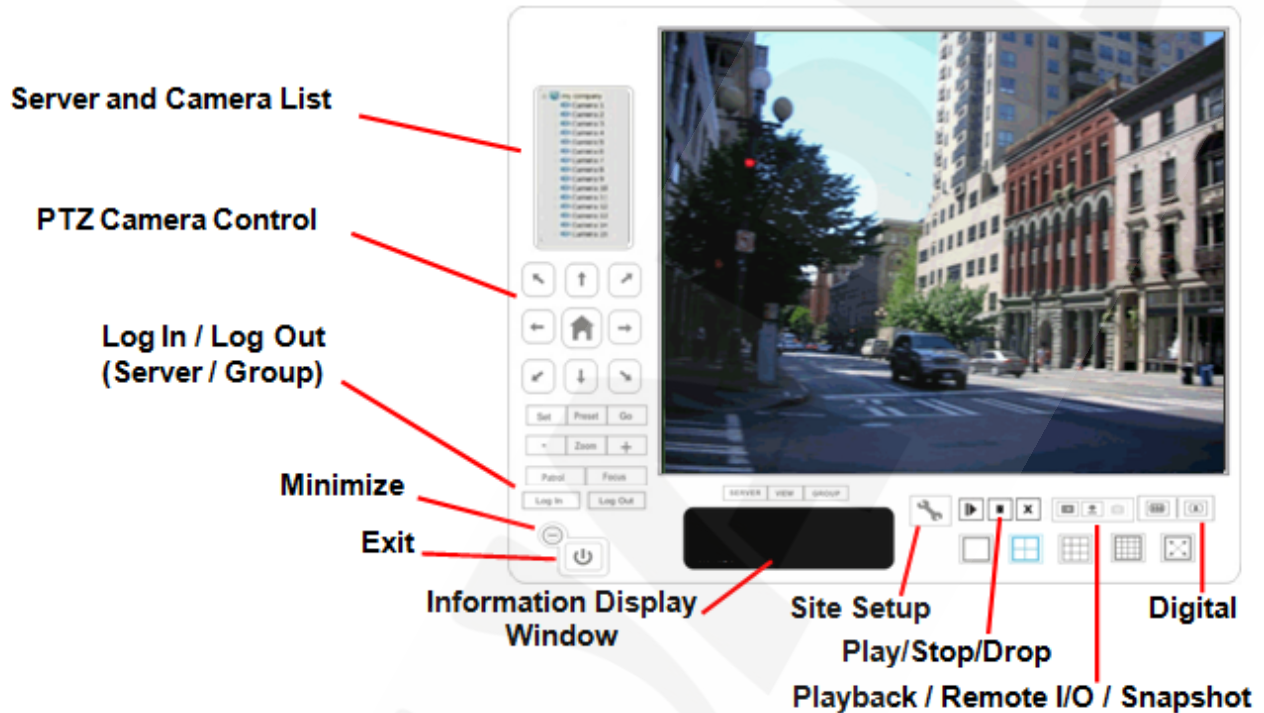

Pic. 7.7

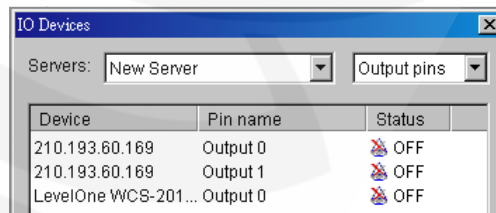 

Pic. 7.8

Chapter 8. Web view

NOTE!

Must make sure the Liver Stream Server is enabled. Check 6.10 Network Service for more details.

8.1. Server IP

Open Internet Explorer and enter the IP address or DDNS “name” of the server followed by the connecting port (*Pic. 8.1*). Example: <http://192.168.1.16:8080/>

NOTE!

Note: 192.168.1.16 is the IP address of the server.

8080 is the port specified in “Use Default Web Server” in Network Service.

 
Make sure the Liver Stream Server is enabled. Check 6.10 Network Service for more detail.

8.2. Remote live viewer

Press this icon to use Remote Live Viewer which functions are the same as Remote Live Viewer (*Pic. 8.1*).

8.3. Remote playback

Press this icon to use Remote Playback which functions are the same as Playback but remote server and backup functions (*Pic. 8.1*).

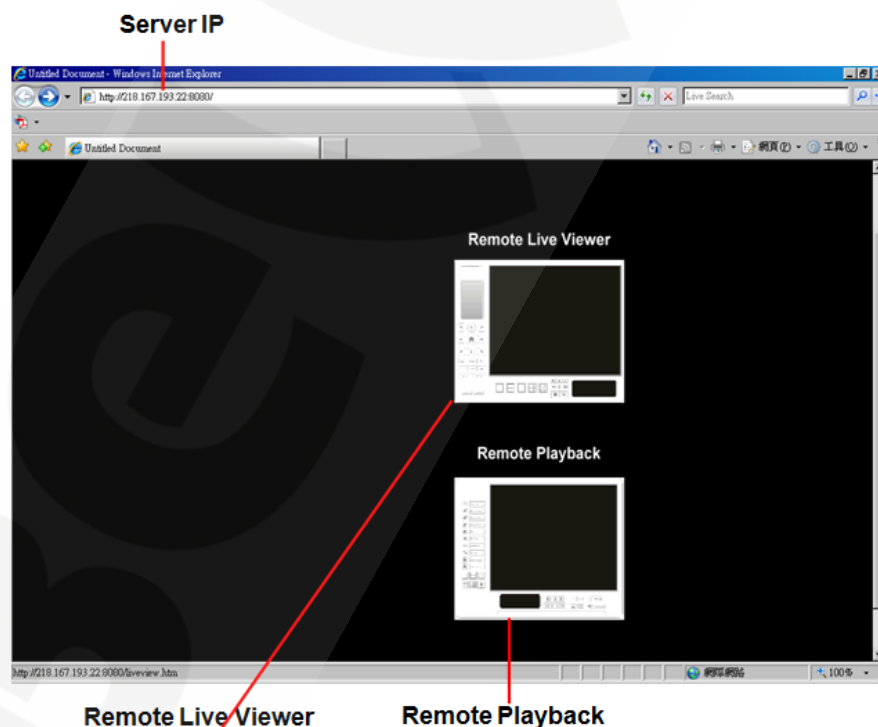

Pic. 8.1

Appendix

A. System loading

Here are some testing results of multi-channel IP camera viewing:

1. 64 Channel IP camera with CIF performance

Equipment configuration

Software:	MainConsole Version 2.6.4 Professional
CPU:	Intel Core 2 Quad Q6600 @ 2400 MHz
Memory:	1024 MB (2 x 512 DDR2-SDRAM)
Ethernet:	Marvell Yukon 88E8052 PCI-E ASF Gigabit Ethernet Controller
Hard Disk:	ST3250620A (250 GB)
Graphic card:	ATI Technologies Inc Radeon X1300 Series
Operating System:	Windows XP Professional SP2

Results from test with a resolution of 352×240

320x240	Quality	Frame Rate	CPU Load	Bandwidth
64 IP camera	Good	20	65%	40~50 Mbps
64 IP camera	Excellent	20	67%	40~50 Mbps

2. 16 Channel IP Camera with D1 Performance

Equipment Configuration

Software:	MainConsole Version 2.6.4 Professional
CPU:	AMD Athlon 64*2 @3600+MHz
Memory:	2048 MB (2 x 1024 DDR2-SDRAM)
Ethernet:	VIA Rhine II Fast Ethernet Adapter
Hard Disk:	ST3250620A (250 GB)
Graphic card:	ATI Technologies Inc EAX1600 Series
Operating System:	Windows XP Professional SP2 x64

Results from Test with a Resolution of 704×480 CCD IP Camera

704x480	Quality	Frame Rate	CPU Load	Bandwidth
16 IP camera	Excellent	30	95%	15~20 Mbps

Results from Test with a Resolution of 640×480 CMOS IP Camera

640x480	Quality	Frame Rate	CPU Load	Bandwidth
16 IP camera	Excellent	30	95%	10~15 Mbps

B. Storage Requirements Table (VGA)

Please refer to the following table to find out the capability for recording into your hard disk.

B.1. NTSC CCD IP Camera

B.1.1. MPEG4 Storage Requirement GB / channel / day @ 30fps

Quality	704*480	352*240	176*120
Excellent	21.1	8.4	2.1
Detailed	9.0	2.6	0.8
Good	4.7	1.6	0.6
Standard	3.7	1.2	0.5
Medium	2.6	0.9	0.4

B.1.2. MPEG4 Storage Requirement GB / channel / day @ 15fps

Quality	704*480	352*240	176*120
Excellent	10.5	4.2	1.1
Detailed	4.5	1.3	0.4
Good	2.3	0.8	0.3
Standard	1.8	0.6	0.2
Medium	1.3	0.5	0.2

B.1.3. MPEG4 Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Storage Requirement
704*480	2048	30	23.0
704*480	2048	15	22.1
704*480	1536	30	18.5
704*480	1536	15	17.9
704*480	1024	30	11.1
704*480	1024	15	11.6
704*480	512	30	5.5
704*480	512	15	6.9
352*240	1536	30	15.8
352*240	1536	15	16.9

352*240	1024	30	11.6
352*240	1024	15	11.6
352*240	512	30	5.6
352*240	512	15	6.3
176*120	1024	30	10.5
176*120	1024	15	9.5
176*120	512	30	5.6
176*120	512	15	5.8
176*120	128	30	1.6
176*120	128	15	1.6

B.1.4. MJPEG Storage Requirement GB / channel / day @ 15fps

Quality	704*480	352*240	176*120
Excellent	79.1	29.5	10.5
Detailed	52.7	15.8	7.4
Good	36.9	10.5	5.3
Standard	21.1	8.4	4.2
Medium	13.7	5.3	3.2

B.1.5. MJPEG Storage Requirement GB / channel / day

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate
704*480	Excellent	15	79.1
704*480	Excellent	5	42.2
704*480	Good	15	36.9
704*480	Good	5	15.8
704*480	Medium	15	13.7
704*480	Medium	5	5.8
352*240	Excellent	15	29.5
352*240	Excellent	5	12.7
352*240	Good	15	10.5
352*240	Good	5	4.7
352*240	Medium	15	5.3
176*120	Medium	5	2.3
176*120	Excellent	15	10.5
176*120	Excellent	5	4.2

176*120	Good	15	5.3
176*120	Good	5	2.1
176*120	Medium	15	3.2
176*120	Medium	5	1.1

B.2. PAL CCD IP Camera

B.2.1. MPEG4 Storage Requirement GB / channel / day @ 30fps

Quality	704*480	352*240	176*120
Excellent	19.4	4.3	1.1
Detailed	6.5	1.6	0.5
Good	4.3	1.1	0.4
Standard	3.2	0.9	0.3
Medium	2.2	0.6	0.2

B.2.2. MPEG4 Storage Requirement GB / channel / day @ 15fps

Quality	704*480	352*240	176*120
Excellent	9.7	2.2	0.5
Detailed	3.2	0.8	0.3
Good	2.2	0.5	0.2
Standard	1.6	0.4	0.2
Medium	1.1	0.3	0.1

B.2.3. MPEG4 Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Storage Requirement
704*480	2048	30	21.6
704*480	2048	15	22.7
704*480	1536	30	17.3
704*480	1536	15	18.4
704*480	1024	30	11.9
704*480	1024	15	13.0
704*480	512	30	5.9
704*480	512	15	7.0
352*240	1536	30	16.2
352*240	1536	15	17.3
352*240	1024	30	11.9

352*240	1024	15	11.9
352*240	512	30	5.9
352*240	512	15	6.5
176*120	1024	30	10.8
176*120	1024	15	10.8
176*120	512	30	5.9
176*120	512	15	6.5
176*120	128	30	1.6
176*120	128	15	1.6

B.2.4. MJPEG Storage Requirement GB / channel / day @ 15fps

Quality	704*480	352*240	176*120
Excellent	84.2	18.4	7.0
Detailed	46.4	10.8	4.9
Good	27.0	7.0	3.8
Standard	14.0	4.9	2.7
Medium	10.8	3.2	1.9

B.2.5. MJPEG Storage Requirement GB / channel / day

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate
704*480	Excellent	15	84.2
704*480	Excellent	5	43.2
704*480	Good	15	27.0
704*480	Good	5	13.0
704*480	Medium	15	10.8
704*480	Medium	5	5.4
352*240	Excellent	15	18.4
352*240	Excellent	5	9.7
352*240	Good	15	7.0
352*240	Good	5	3.6
352*240	Medium	15	3.2
176*120	Medium	5	1.7
176*120	Excellent	15	7.0
176*120	Excellent	5	3.2
176*120	Good	15	3.8

176*120	Good	5	1.6
176*120	Medium	15	1.9
176*120	Medium	5	0.8

B.3. CMOS IP Camera

B.3.1. MPEG4 Storage Requirement GB / channel / day @ 30fps

Quality	640*480	320*240	160*120
Excellent	10.5	3.2	0.9
Detailed	4.2	1.6	0.5
Good	3.2	1.1	0.3
Standard	2.6	0.7	0.3
Medium	2.6	0.6	0.2

B.3.2. MPEG4 Storage Requirement GB / channel / day @ 15fps

Quality	640*480	320*240	160*120
Excellent	5.3	1.6	0.4
Detailed	2.1	0.8	0.3
Good	1.6	0.6	0.2
Standard	1.3	0.4	0.1
Medium	1.3	0.3	0.1

B.3.3. MPEG4 Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Current Bitrate
640*480	2048	30	23.0
640*480	2048	15	22.2
640*480	1536	30	18.5
640*480	1536	15	17.9
640*480	1024	30	10.5
640*480	1024	15	10.5
640*480	512	30	5.3
640*480	512	15	6.3
320*240	1536	30	15.8
320*240	1536	15	16.9
320*240	1024	30	10.5
320*240	1024	15	10.5

320*240	512	30	5.8
320*240	512	15	6.3
160*120	1024	30	10.0
160*120	1024	15	7.9
160*120	512	30	5.3
160*120	512	15	0.5
160*120	128	30	1.4
160*120	128	15	1.5

B.3.4. MJPEG Storage Requirement GB / channel / day @ 15fps

Quality	640*480	320*240	160*120
Excellent	42.2	15.8	6.3
Detailed	25.3	9.5	4.2
Good	16.9	6.9	3.2
Standard	13.7	5.3	2.5
Medium	9.5	3.7	1.8

B.3.5. MJPEG Storage Requirement GB / channel / day

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate
640*480	Excellent	15	42.2
640*480	Excellent	5	16.9
640*480	Good	15	16.9
640*480	Good	5	6.9
640*480	Medium	15	9.5
640*480	Medium	5	3.8
320*240	Excellent	15	15.8
320*240	Excellent	5	5.8
320*240	Good	15	6.9
320*240	Good	5	2.7
320*240	Medium	15	3.7
160*120	Medium	5	1.4
160*120	Excellent	15	6.3
160*120	Excellent	5	2.4
160*120	Good	15	3.2
160*120	Good	5	1.2

160*120	Medium	15	1.8
160*120	Medium	5	0.7

C. Storage Requirement Table (Mega)

Please refer to the following table to find out the capability for recording into your hard disk.

C.1.1. H.264 Storage Requirement GB / channel / day @ 15fps

Quality	1280*1024	1280*720	640*480	320*240
Excellent	232.4	157.7	24.9	7.5
Detailed	141.4	107.9	16.6	6.3
Good	107.9	74.7	14.2	5
Standard	66.4	49.8	12.5	4.6
Medium	49.8	37.4	10.8	3.8

C.1.2. H.264 Storage Requirement GB / channel / day @ 10fps

Quality	1280*1024	1280*720	640*480	320*240
Excellent	157.7	116.2	20.8	5.9
Detailed	99.6	74.7	15	5
Good	74.7	54	13.3	4.7
Standard	54	37.4	10.8	4.2
Medium	37.4	29.1	10	3.4

C.1.3. MPEG4 Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Storage Requirement
1280*1024	6144	15	522.9
1280*1024	6144	10	522.9
1280*1024	2048	15	182.6
1280*1024	2048	10	182.6
1280*1024	512	15	45.7
1280*1024	512	10	45.7
1280*720	6144	15	522.9
1280*720	6144	10	522.9
1280*720	2048	15	182.6
1280*720	2048	10	182.6
1280*720	512	15	45.7

1280*720	512	10	45.7
640*480	6144	15	522.9
640*480	6144	10	522.9
640*480	2048	15	182.6
640*480	2048	10	182.6
640*480	512	15	45.7
640*480	512	10	45.7
320*240	6144	15	423.3
320*240	6144	10	298.8
320*240	2048	15	182.6
320*240	2048	10	182.6
320*240	512	15	45.7
320*240	512	10	45.7

C.1.4. MPEG4 Storage Requirement GB / channel / day @ 15fps

Quality	1280*1024	1280*720	640*480	320*240
Excellent	315.4	249	49.8	10.8
Detailed	240.7	182.6	37.4	9.2
Good	149.4	116.2	24.9	7.5
Standard	99.6	74.7	20.8	5.9
Medium	74.7	49.8	16.6	5

C.1.5. MPEG4 Storage Requirement GB / channel / day @ 10fps

Quality	1280*1024	1280*720	640*480	320*240
Excellent	249	190.9	41.5	9.2
Detailed	182.6	132.8	33.2	8.3
Good	116.2	91.3	20.8	6.7
Standard	78.9	58.1	16.6	5.4
Medium	58.1	45.7	14.5	4.2

C.1.6. MPEG4 Storage Requirement GB / channel / day

Image-Size	Quality Setting	Frame-Rate Setting	Storage Requirement
------------	-----------------	--------------------	---------------------

1280*1024	6144	15	431.6
1280*1024	6144	10	522.9
1280*1024	2048	15	182.6
1280*1024	2048	10	182.6
1280*1024	512	15	45.7
1280*1024	512	10	45.7
1280*720	6144	15	522.9
1280*720	6144	10	522.9
1280*720	2048	15	182.6
1280*720	2048	10	182.6
1280*720	512	15	45.7
1280*720	512	10	45.7
640*480	6144	15	522.9
640*480	6144	10	522.9
640*480	2048	15	182.6
640*480	2048	10	182.6
640*480	512	15	45.7
640*480	512	10	45.7
320*240	6144	15	182.6
320*240	6144	10	149.4
320*240	2048	15	182.6
320*240	2048	10	149.4
320*240	512	15	45.7
320*240	512	10	45.7

2.VGA Mode

C.2.1. H.264 Storage Requirement GB / channel / day @ 30fps

Quality	640*480	320*240
Excellent	66.4	10
Detailed	37.4	8.3
Good	24.9	5.9
Standard	16.6	5
Medium	15	4.2

C.2.2. H.264 Storage Requirement GB / channel / day @ 15fps

Quality	640*480	320*240
---------	---------	---------

Excellent	41.5	8.3
Detailed	24.9	6.7
Good	20.8	5
Standard	15	4.6
Medium	12.5	4.2

C.2.3. H.264 Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Current Bitrate	Storage Requirement
640*480	6144	30	6300	522.9
640*480	6144	15	6300	522.9
640*480	2048	30	2200	182.6
640*480	2048	15	2200	182.6
640*480	512	30	550	45.7
640*480	512	15	550	45.7
320*240	6144	30	6300	522.9
320*240	6144	15	5500	456.5
320*240	2048	30	2200	182.6
320*240	2048	15	2200	182.6
320*240	512	30	550	45.7
320*240	512	15	550	45.7

C.2.4. MPEG4 Storage Requirement GB / channel / day @ 30fps

Quality	640*480	320*240
Excellent	116.2	20.8
Detailed	83	13.3
Good	49.8	10
Standard	33.2	7.5
Medium	24.9	6.7

C.2.5. MPEG4 Storage Requirement GB / channel / day @ 15fps

Quality	640*480	320*240
Excellent	74.7	15
Detailed	54	11.7
Good	37.4	8.3
Standard	25	6.7

Medium	16.6	5.9
--------	------	-----

C.2.6. MJPEG Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Current Bitrate	Storage Requirement
640*480	6144	30	6300	522.9
640*480	6144	15	6300	522.9
640*480	2048	30	2200	182.6
640*480	2048	15	2200	182.6
640*480	512	30	550	45.7
640*480	512	15	550	45.7
320*240	6144	30	5100	423.3
320*240	6144	15	2800	232.4
320*240	2048	30	2200	182.6
320*240	2048	15	2200	182.6
320*240	512	30	550	45.7
320*240	512	15	550	45.7